

KATANA II

6/23/2026



INSTALLED BASE KEY INFORMATION

- ◆ 150 robots installed worldwide
- ◆ Performing over 1 million cuts/hr
- 📊 45% of ABI projects include robotic systems (last 3 years)
- 📈 Average project size has grown from 2 to 6 robots (over the last 5 years)
- 🔧 End of Arm Tools expanded from 2 to 4 types
 - ⚙️ Scoring more than 150 different SKUs
 - 💧 40,000 cuts/hr per robot using waterjet (5-nozzle setup)

SCORING CHALLENGES

SCORING CHALLENGES

SCORED PRODUCTS

Controlled gas release

Aesthetic purpose

Consistent look



UNSCORED PRODUCTS

Random cracks

Uncontrolled appearance



SHARED CHALLENGES FROM CUSTOMERS

1 - Accurately score a wide variety of products

- From sticky doughs to stiff dough with any kind of toppings or inclusion
- From simple to complex scoring pattern

2 - Ensure consistent scoring whatever process fluctuation upstream

- Random product positioning after depositing
- Product shape inconsistency after make up and proofing

3 - Make it easy for operators

- No skilled labour or long training required for operation and maintenance
- Easy safety & accessibility


4 - Scoring beyond human capability

- Delivers scoring at high production speeds
- Enables scoring cuts not achievable by hand


OUR ANSWER

KATANA II


A perfect cut. A unique signature.

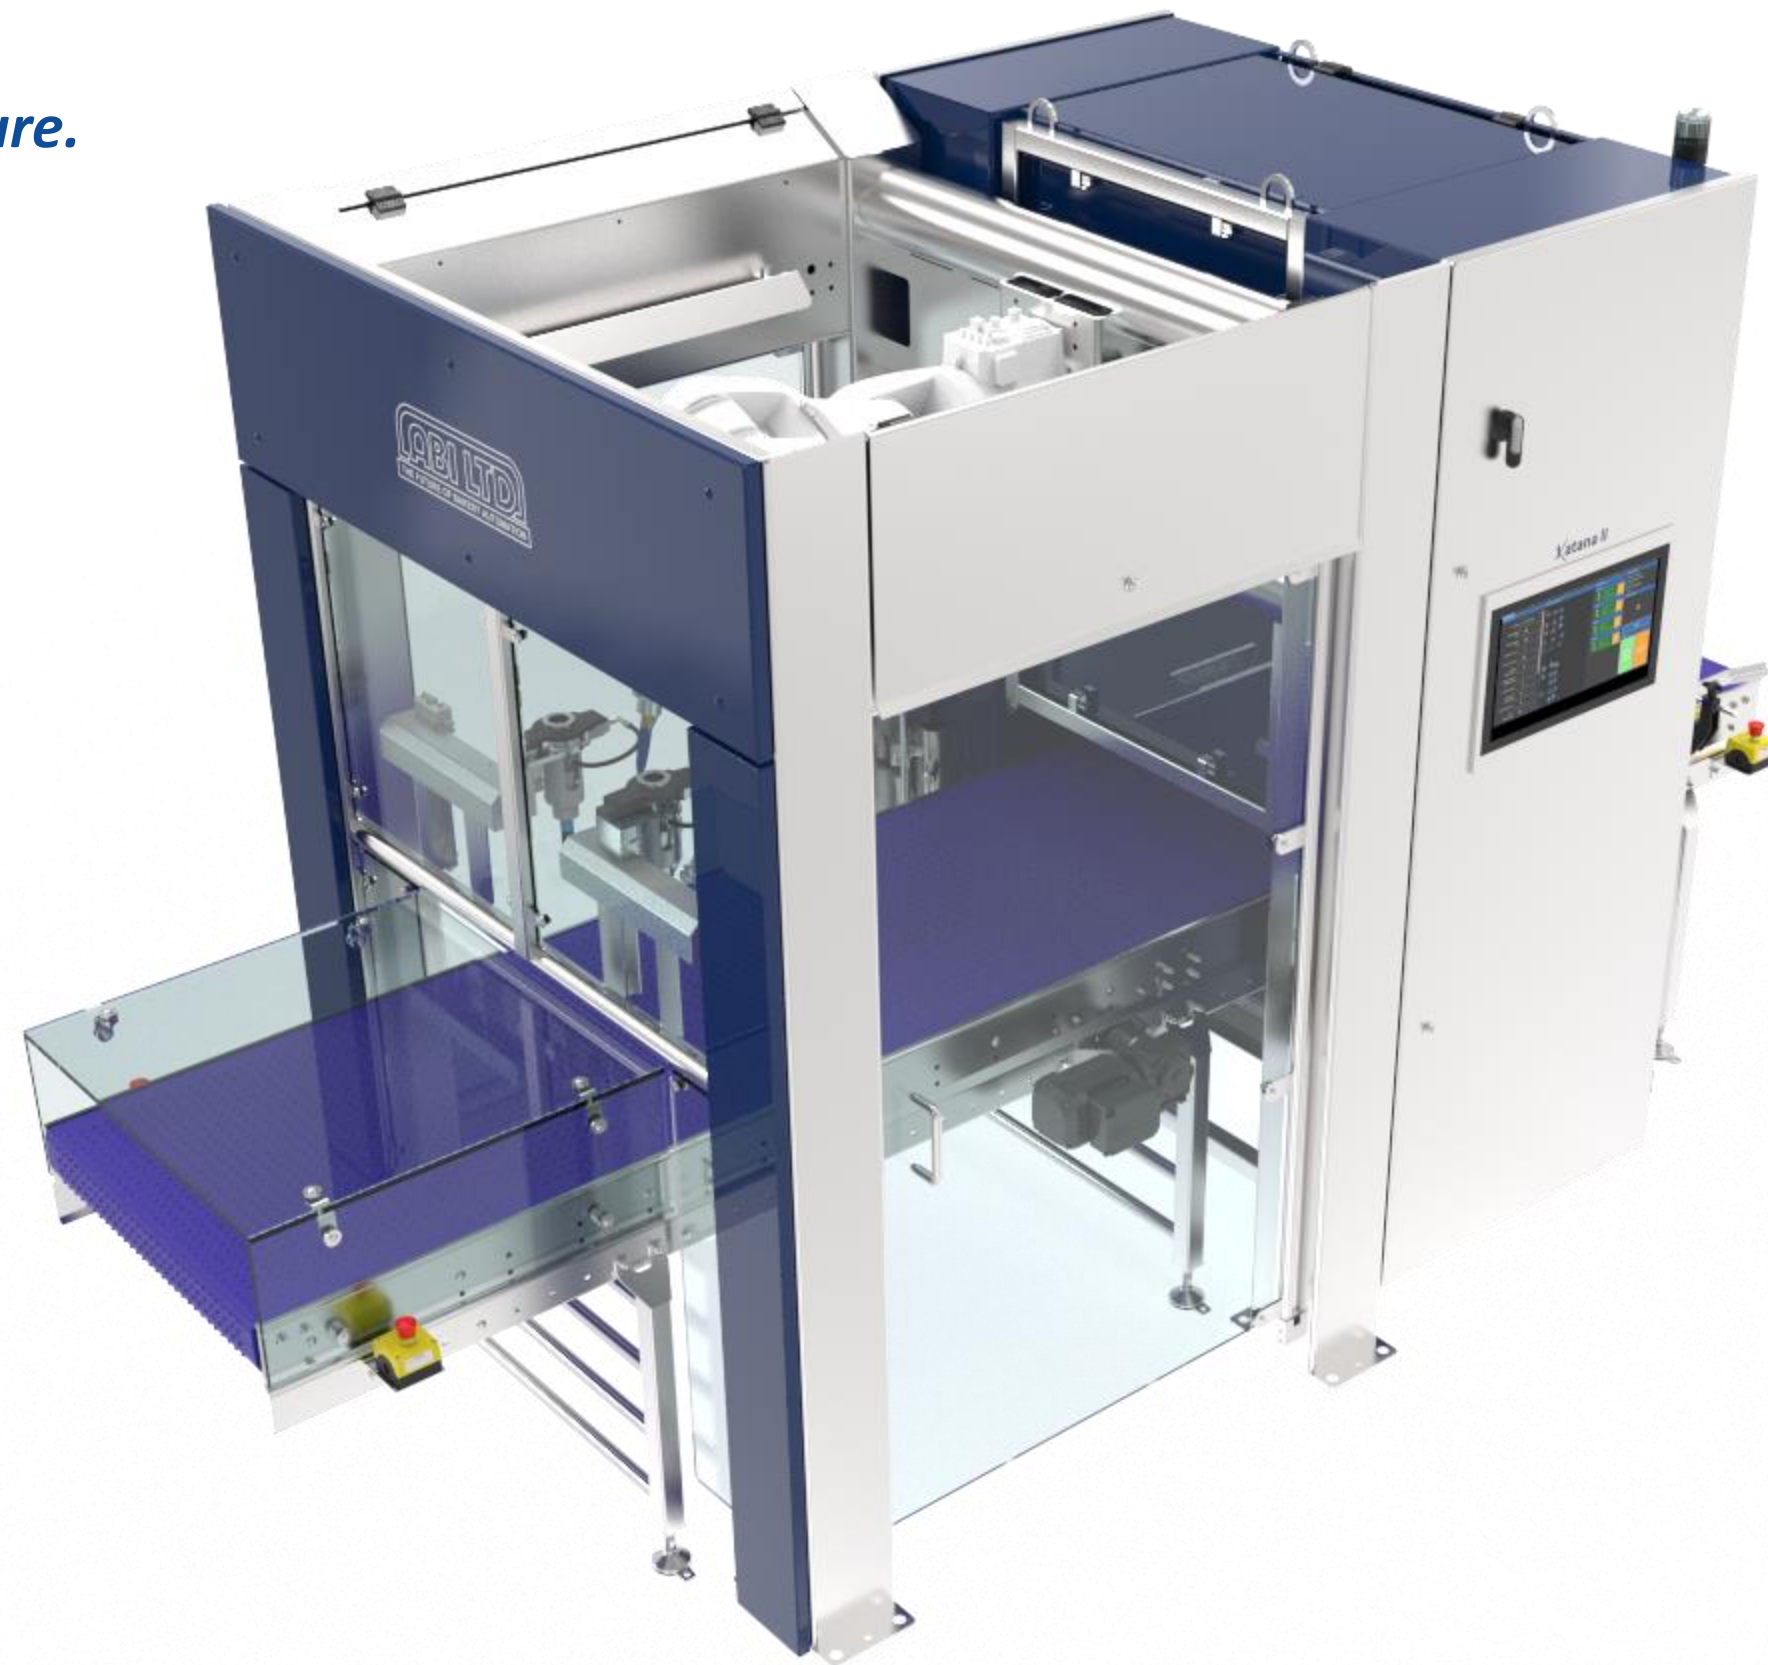

KATANA II

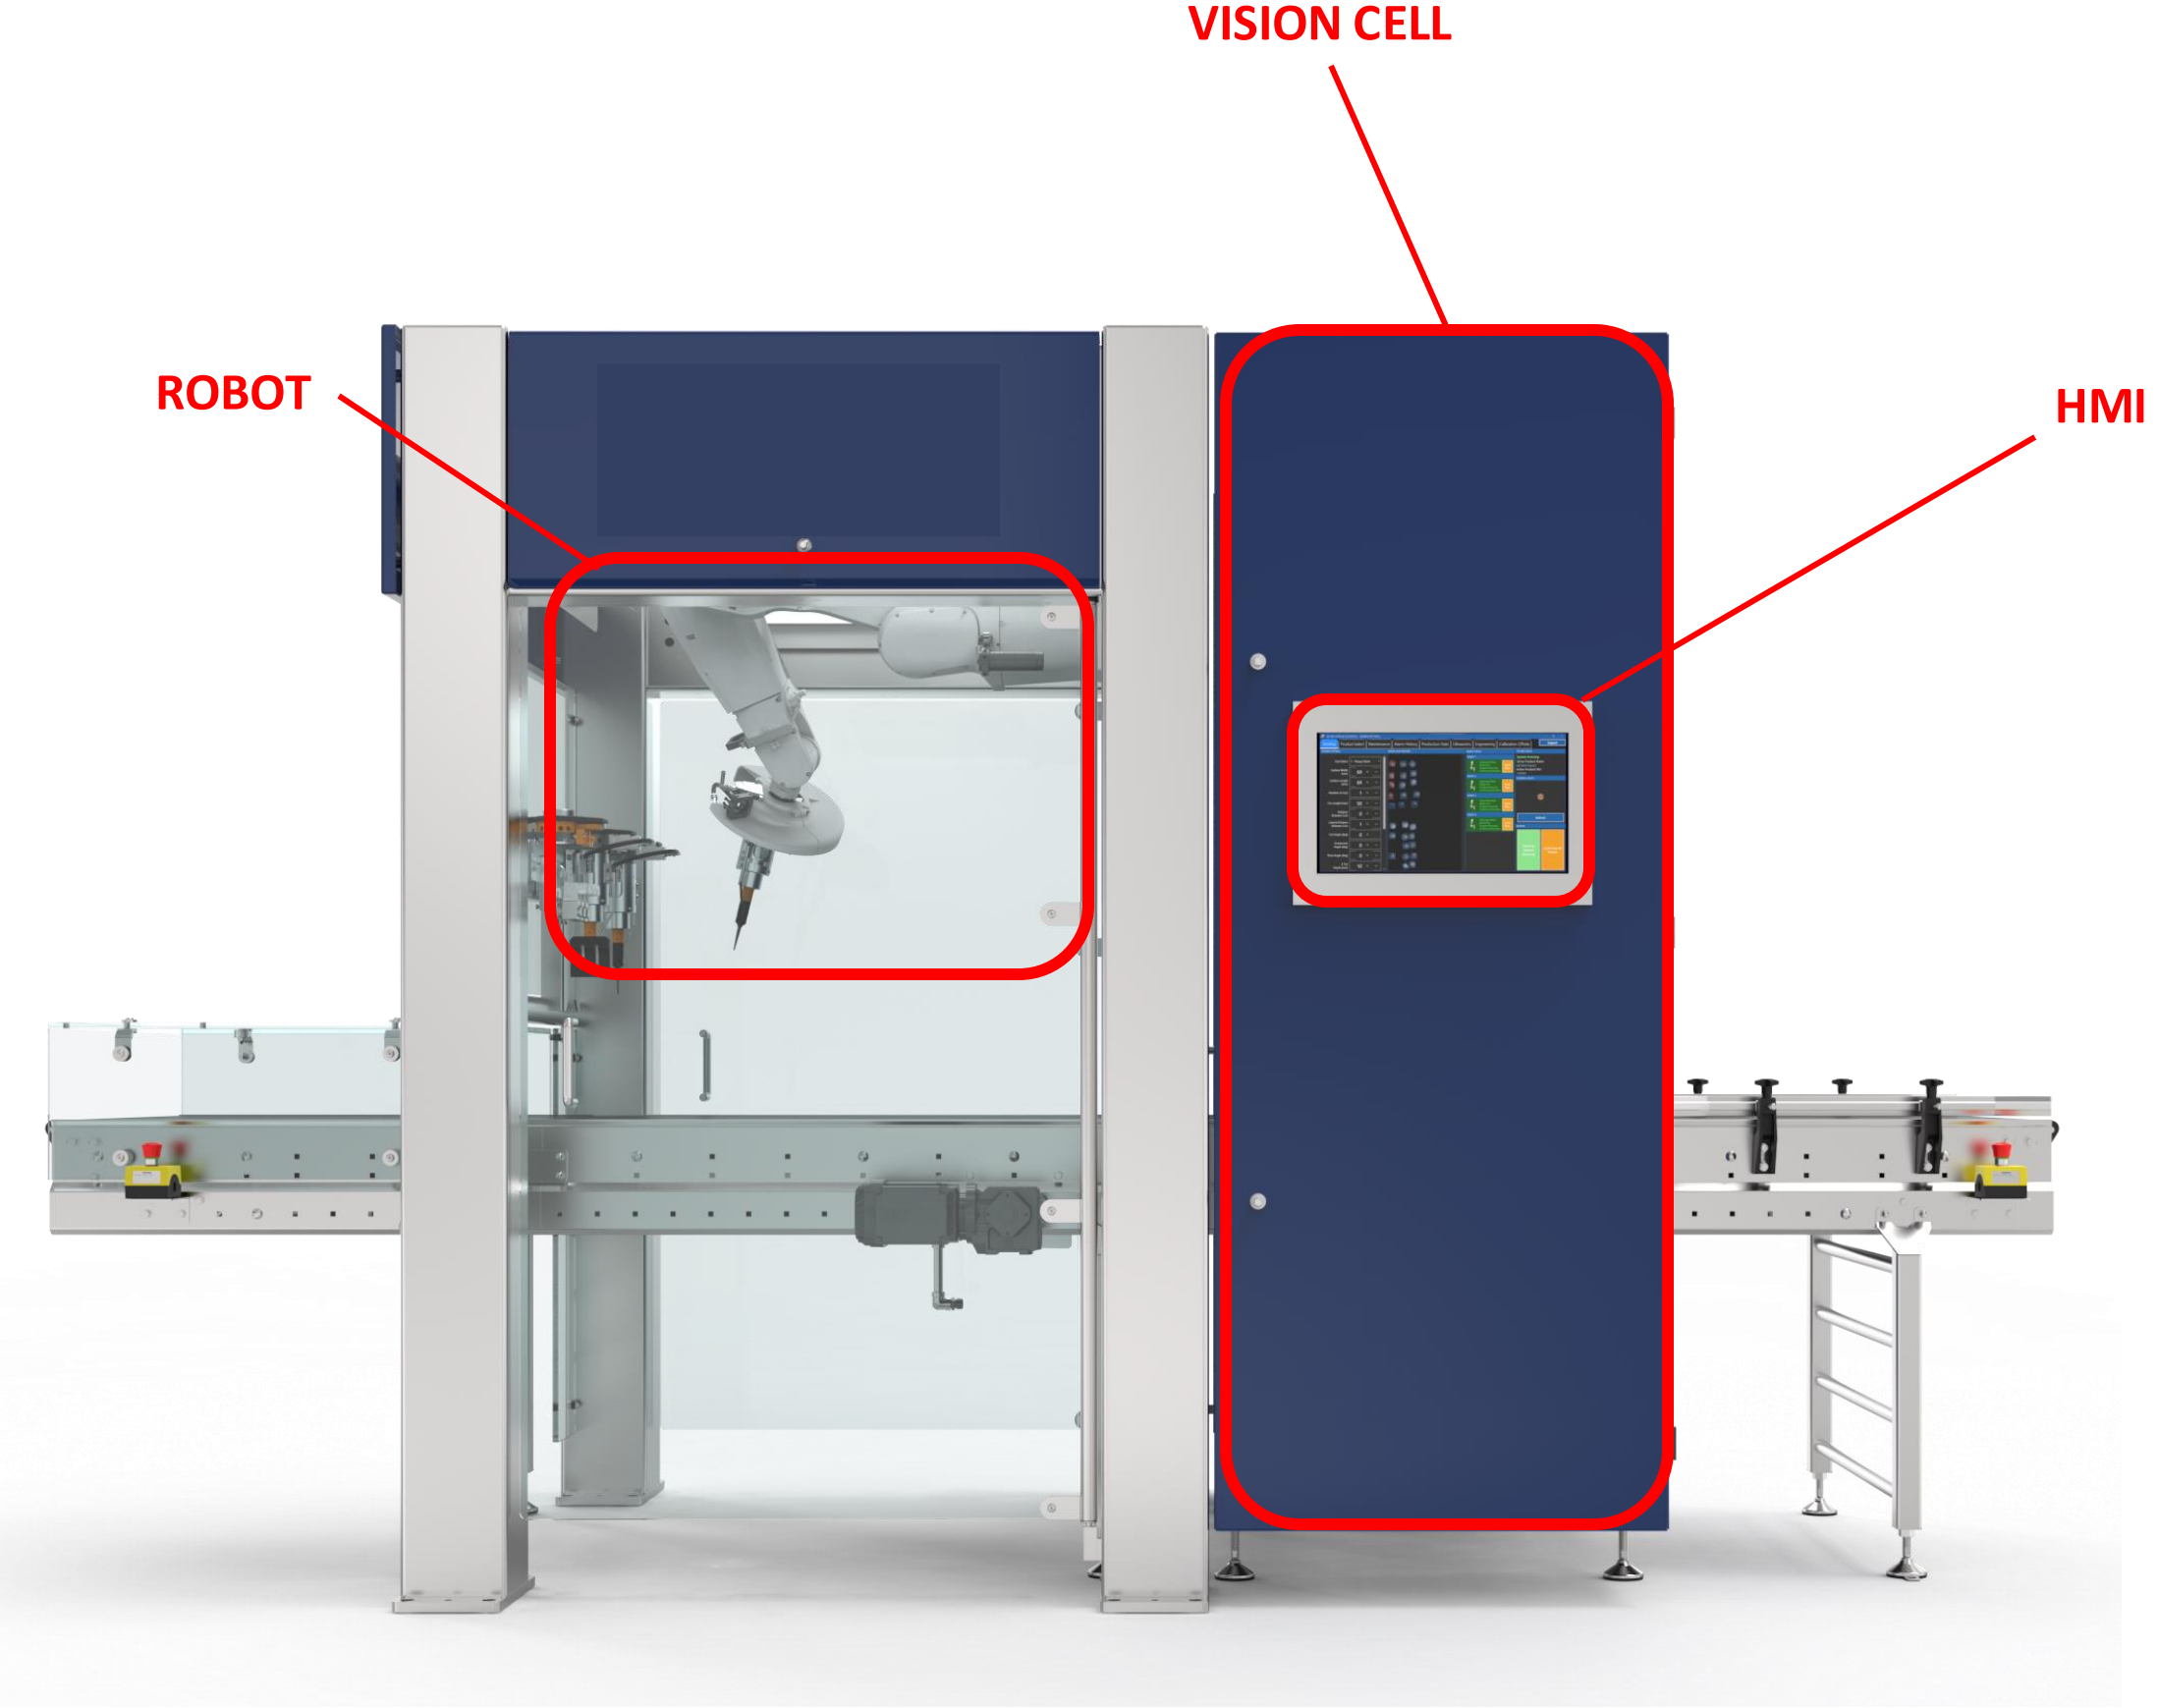

WORKING PRINCIPLE

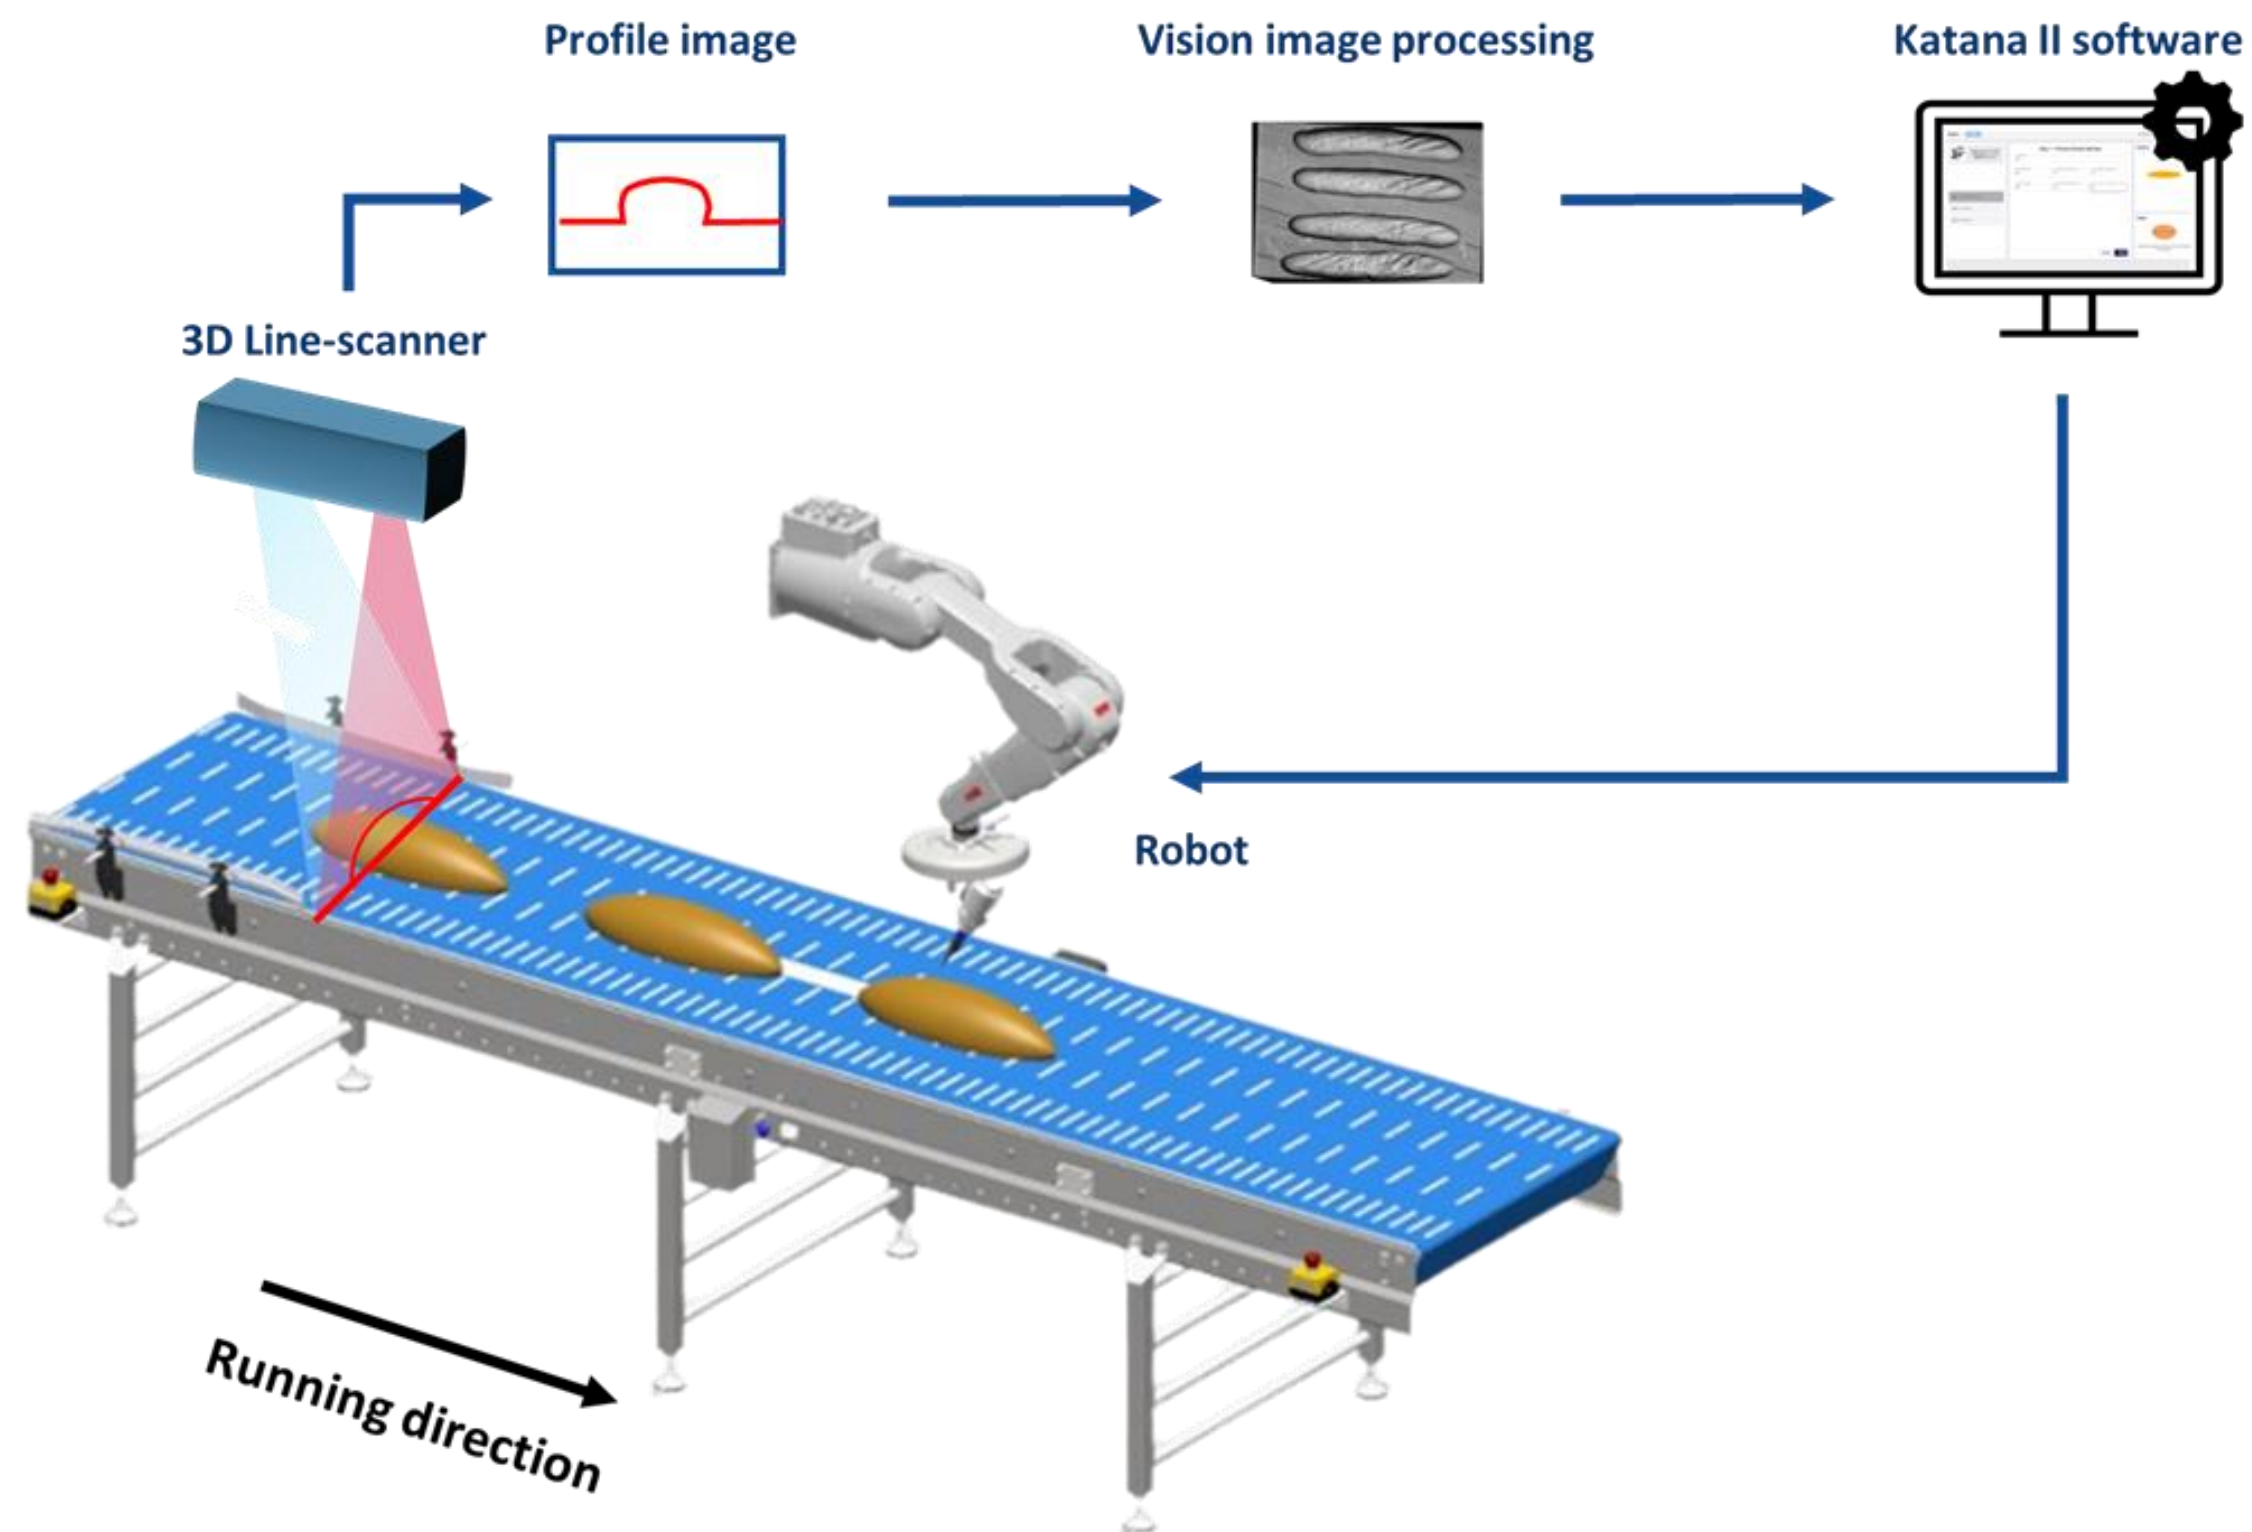


PRODUCT QUALITY

Unmatched scoring accuracy

For a wide range of product & scoring pattern


UNMATCHED SCORING ACCURACY: CLEAN CUT

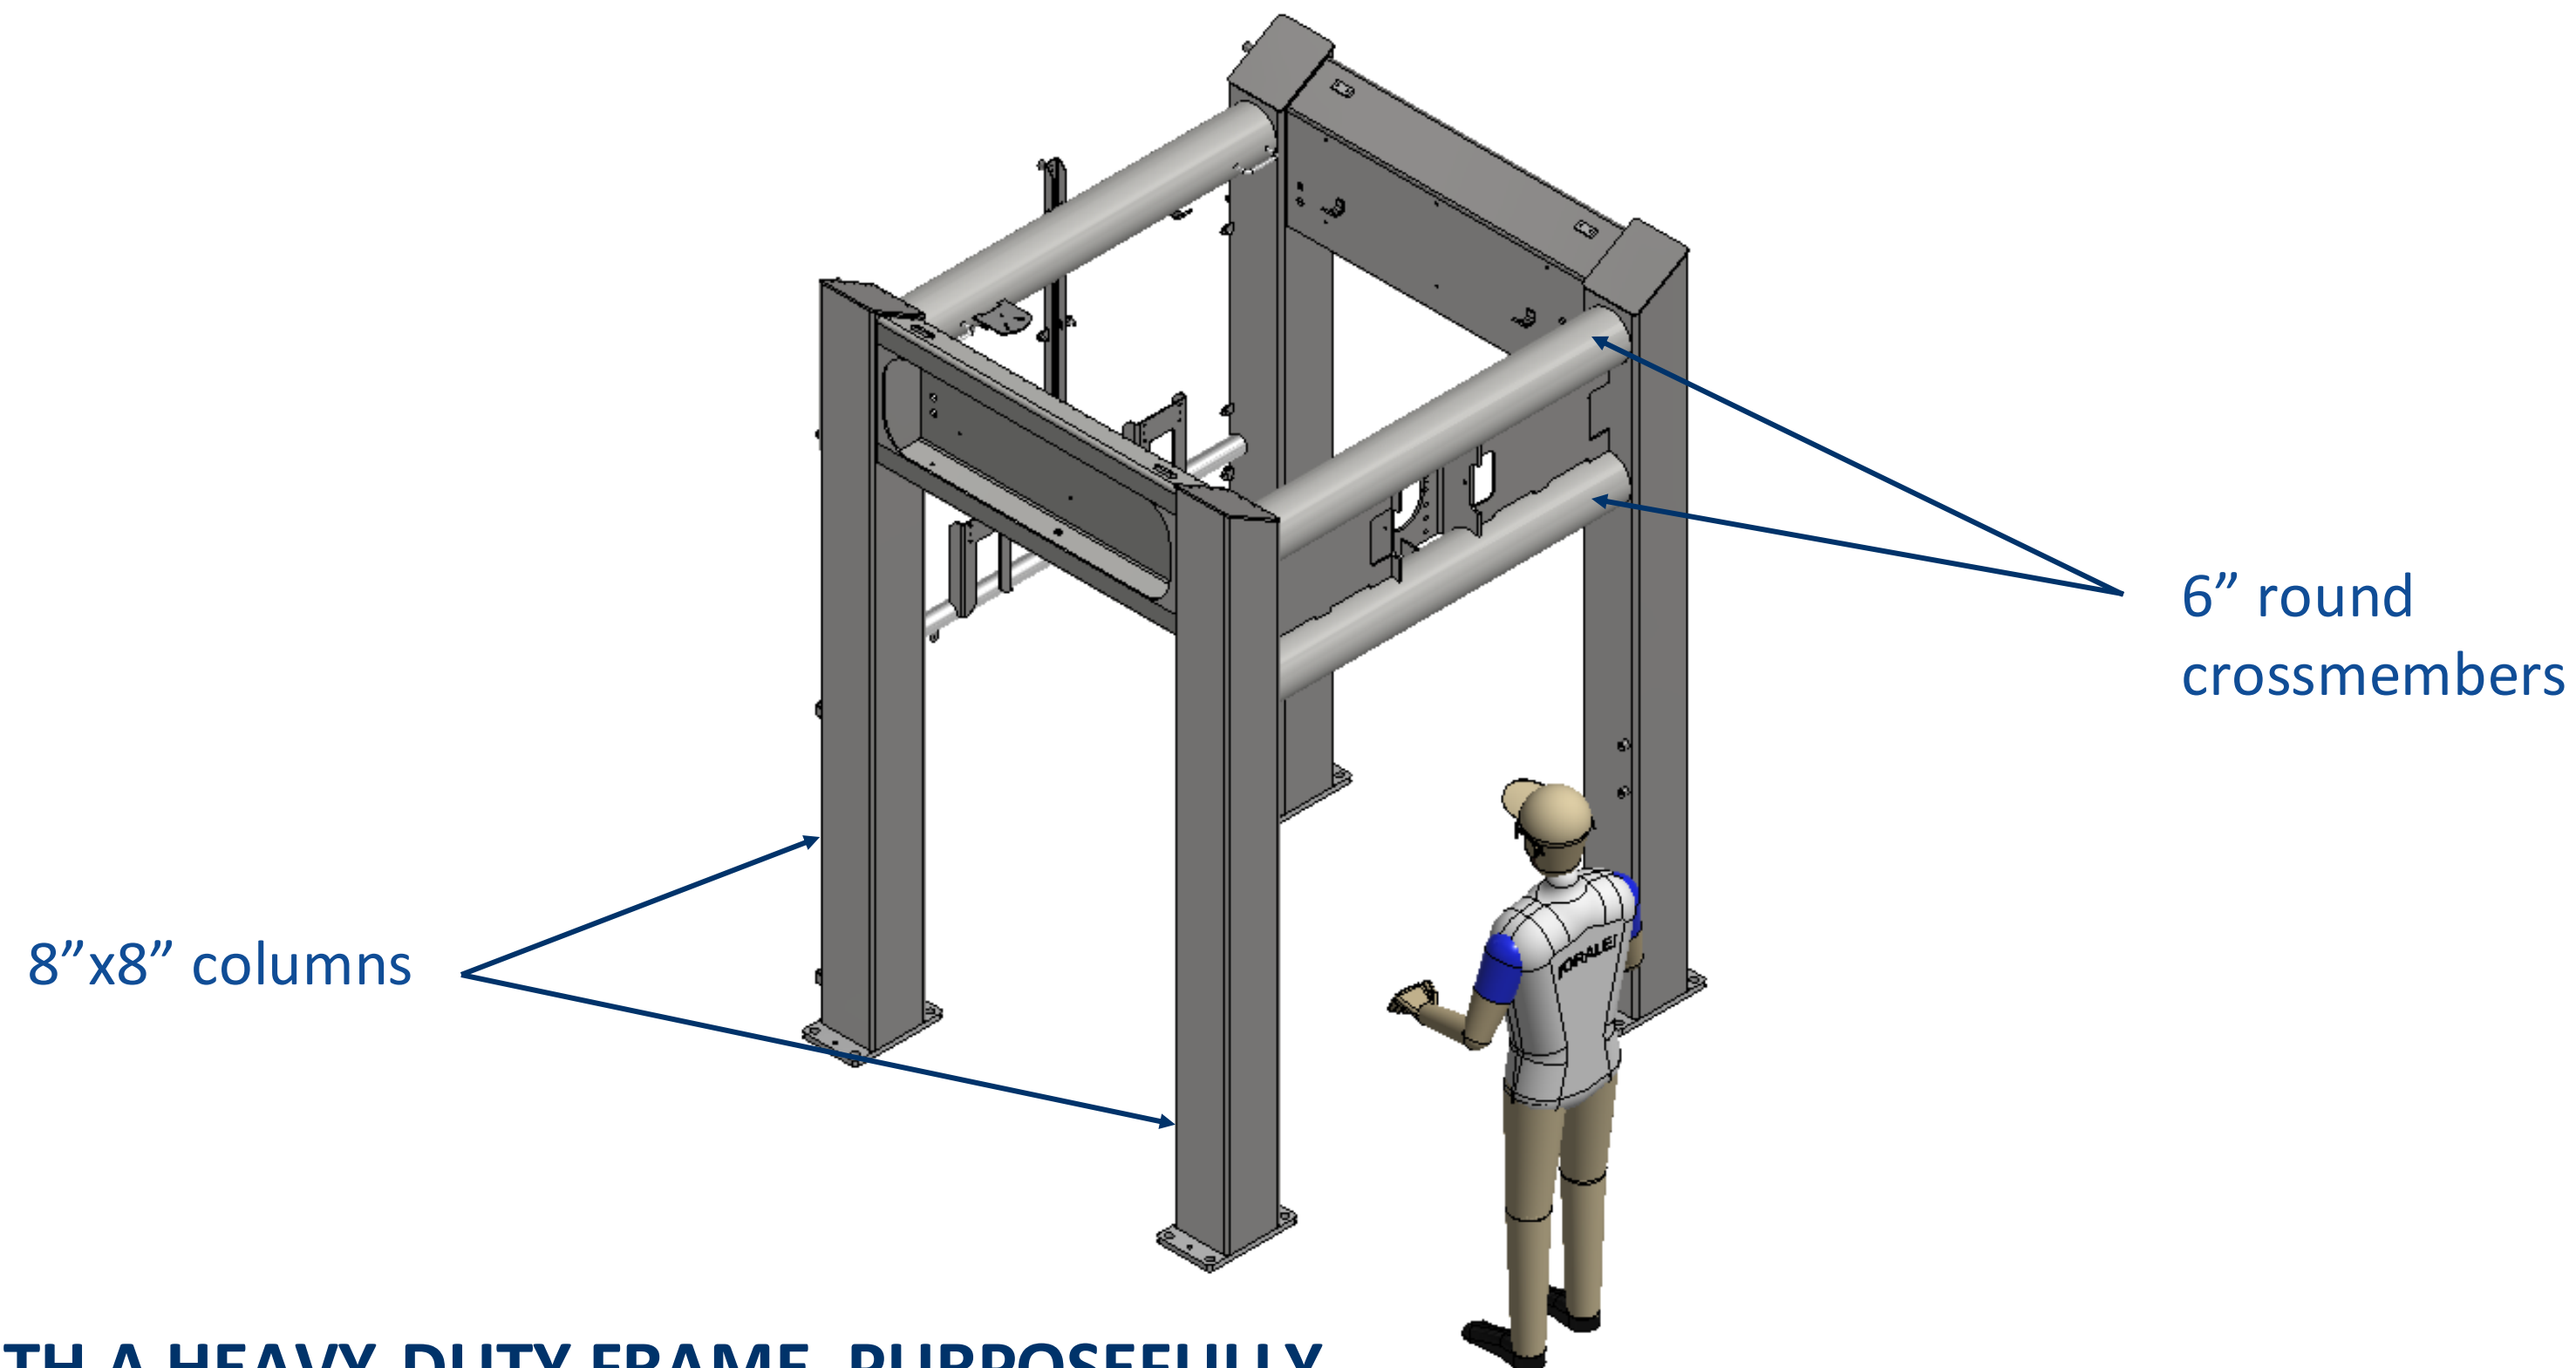

**BUILT WITH A HEAVY-DUTY FRAME, PURPOSEFULLY
DESIGNED TO DELIVER HIGH STABILITY**

UNMATCHED SCORING QUALITY: CLEAN CUT

FRAME KATANA 1

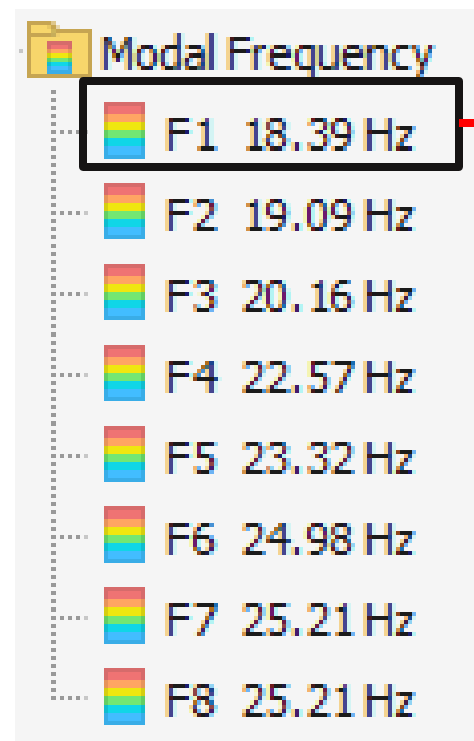

High Resonance




High vibration



Disturbed Cut

ROBOT ARM

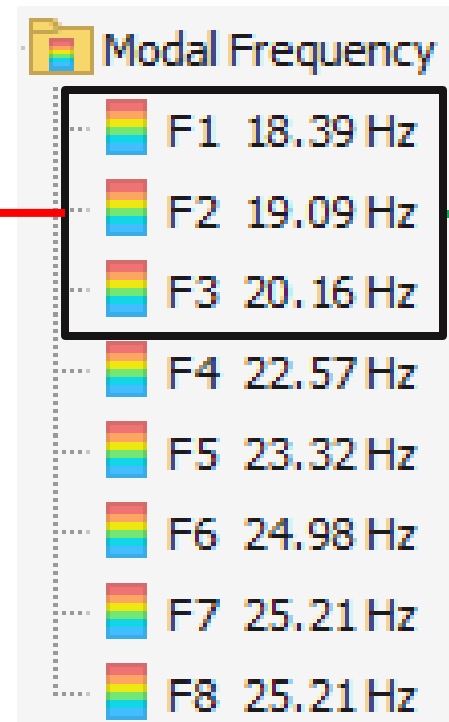

Low resonance




Low vibration



Clean Cut

FRAME KATANA II

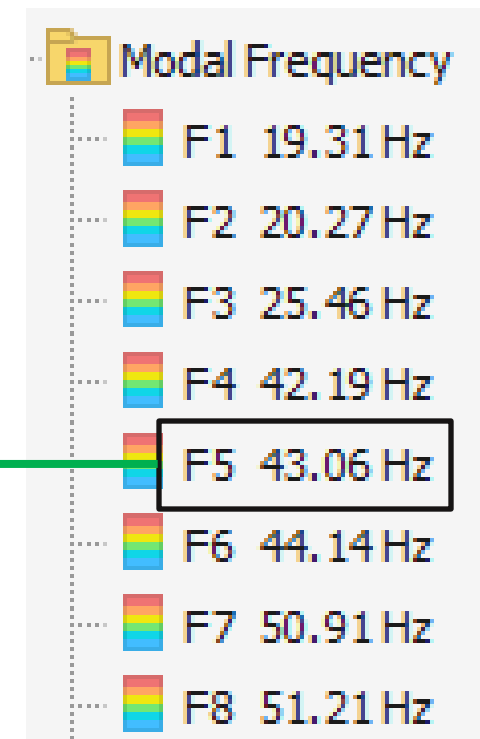

Robust frame offers
high vibration
frequency

LOW RESONANCE MODE


UNMATCHED SCORING QUALITY: DYNAMIC DEPTH CONTROL



Katana II Software includes the
“DDC : Dynamic Depth Control”
Optimized point count adapted to speed


Dynamic Depth Control

Conventional robotic scoring

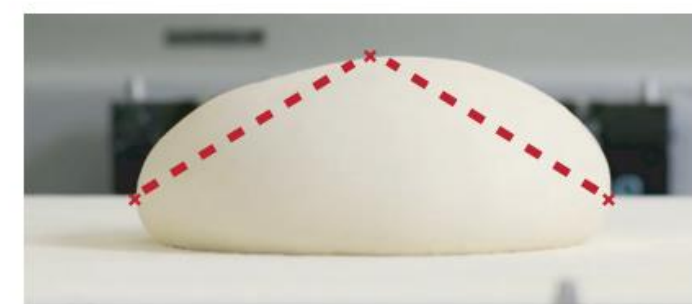

Average 3 points per cut
✗ Cut depth fluctuation

Katana II

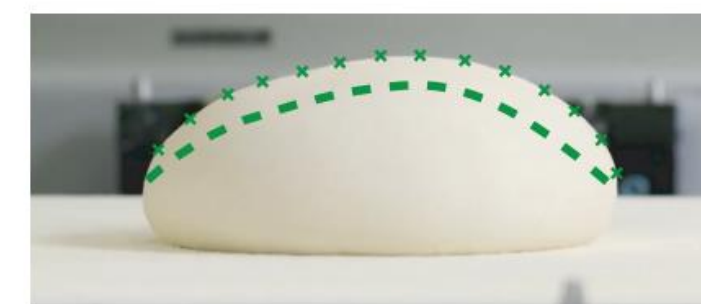


Up to 14 points per cut
✓ Consistent cut depth

TOOL MOVEMENT ACCURATELY
ADAPTS TO THE PRODUCT CONTOUR

UNMATCHED SCORING QUALITY: DYNAMIC SHAPE CONTROL


Dynamic Shape Control

Conventional robotic scoring

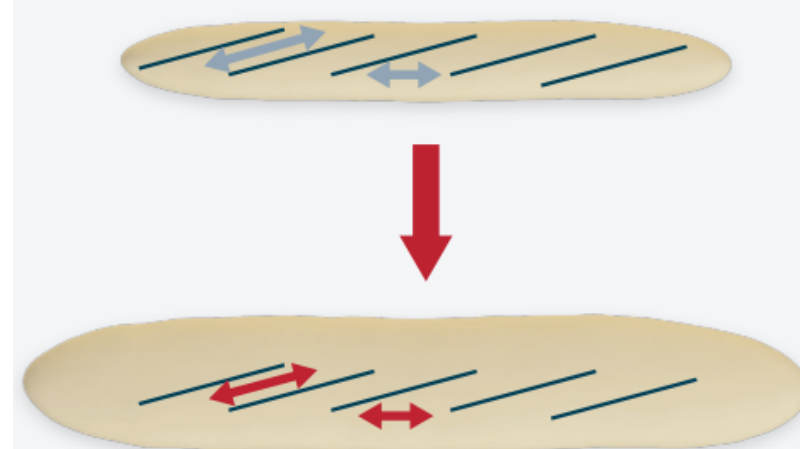

✗ No adaptation of the scoring pattern to the product shape

Katana II

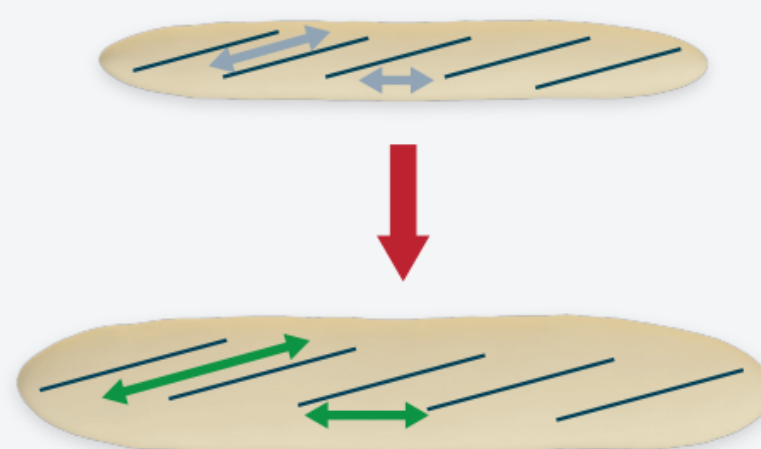

✓ Scoring proportionally adapts to the product shape

Katana II Software includes the
“**DSC : Dynamic Shape Control**”



SCORING PATTERN PROPORTIONALLY
ADAPTS TO VARIATIONS IN DOUGH
PIECES SHAPES UPSTREAM IN THE
PROCESS

FOR A WIDE RANGE OF PRODUCT

FROM HYDRATED & RESTED
TO STIFF DOUGHS



FLOURED OR SEEDED
PRODUCTS



ON ANY TYPE OF CARRIERS



Peelboard



Flat tray



Fluted tray




Pan



Belt

AND A WIDE RANGE OF SCORING PATTERN

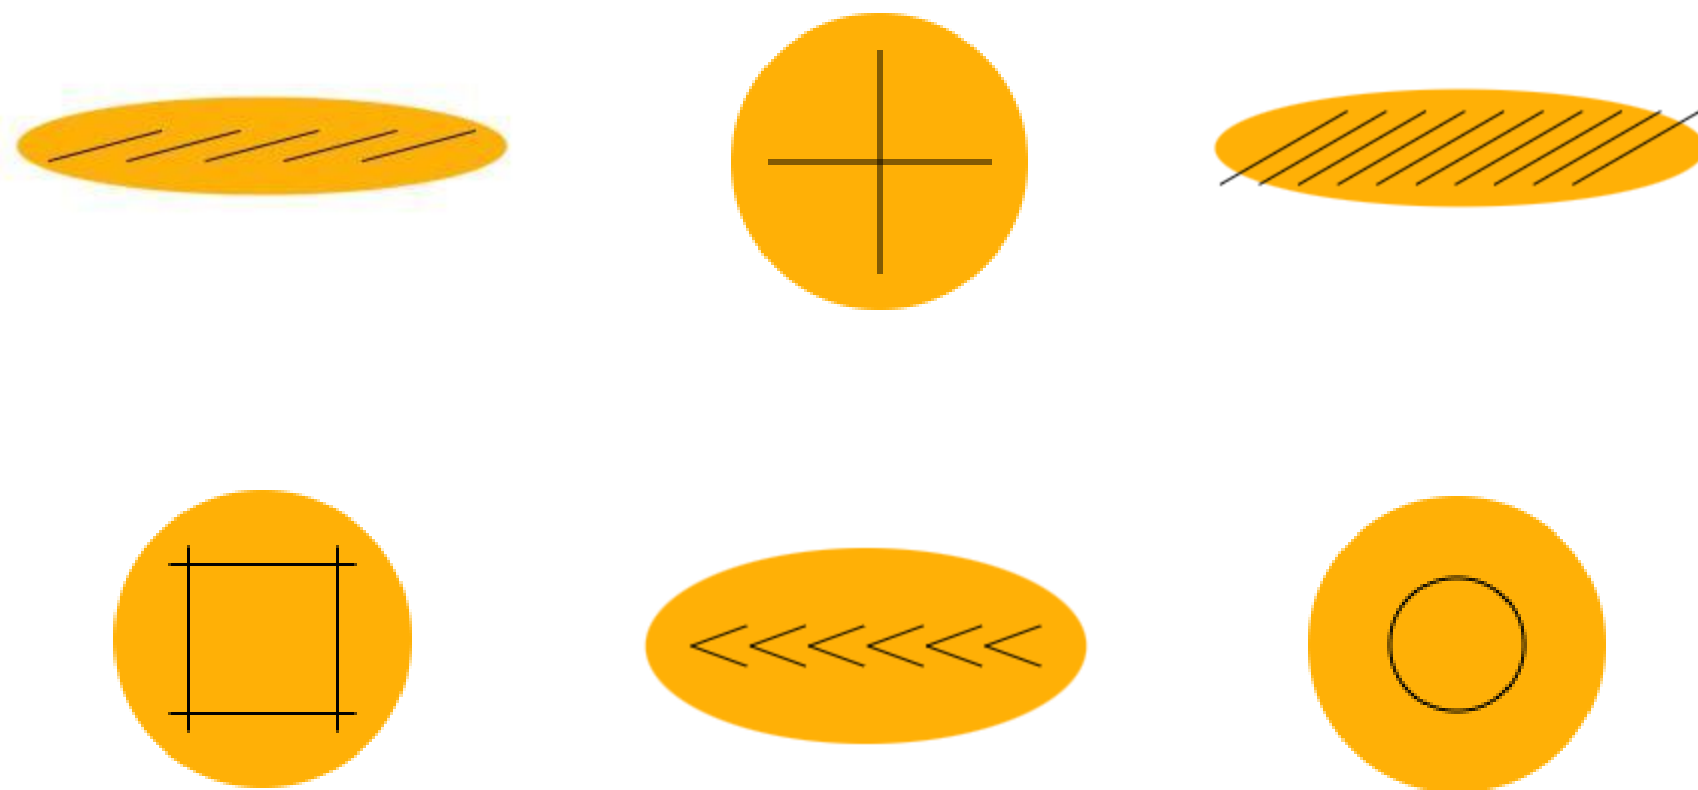

FROM CLASSIC TO COMPLEX SCORING PATTERN

HIGH-ACCURACY TO THE MILLIMETER AND
THE DEGREE

INDUSTRIAL PERFORMANCE


Unique flexibility

Small footprint

Optimized production efficiency

UNIQUE FLEXIBILITY: 3 SCORING TOOLS

ULTRASONIC PLUNGE BLADE

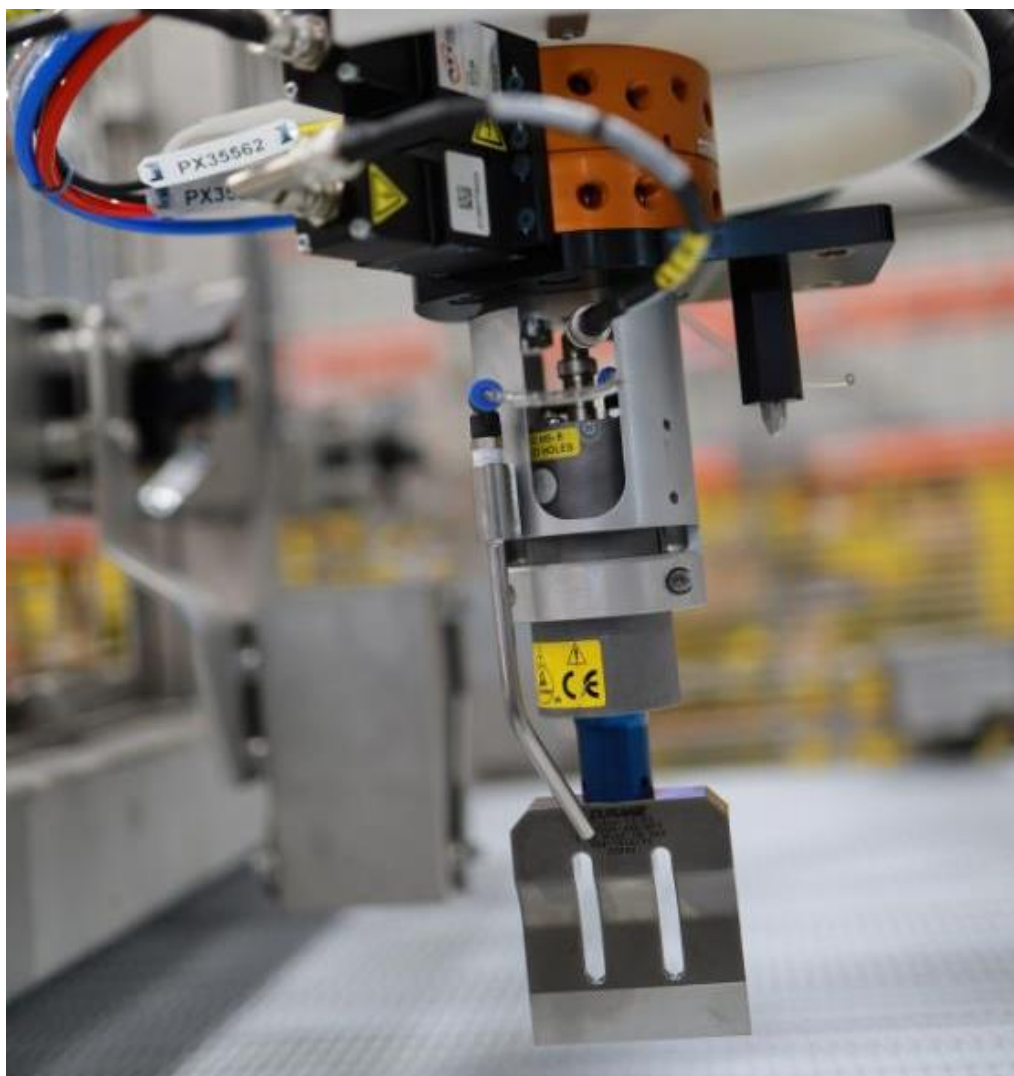

ULTRASONIC DRAG BLADE



WATERJET



AVAILABLE ON THE SAME EQUIPEMENT

ULTRASONIC DRAG BLADE

Recommended for

- ✓ Highly hydrated and sticky dough
- ✓ Complex and deep cut
- ✓ Inclusions, seeds and toppings



Authentik baguette
4 angled cuts



Ciabatta
1 straight cut



Boule
Square cut



Seeded loaf bread
1 straight cut



- ✓ **Scoring rate** : Up to **120 cuts/min**
- ✓ **Scoring Accuracy**: Configurable angles, length and depth of cut
- ✓ **Material** : Titanium, air-cooled

ULTRASONIC PLUNGE BLADE

Recommended for

- ✓ Simple cuts
- ✓ High scoring rate
- ✓ Coated products



Bread sticks

8 cuts



Pretzel bun

Cross-cut




Boule

Cross-cut



Bretzel

1 cut

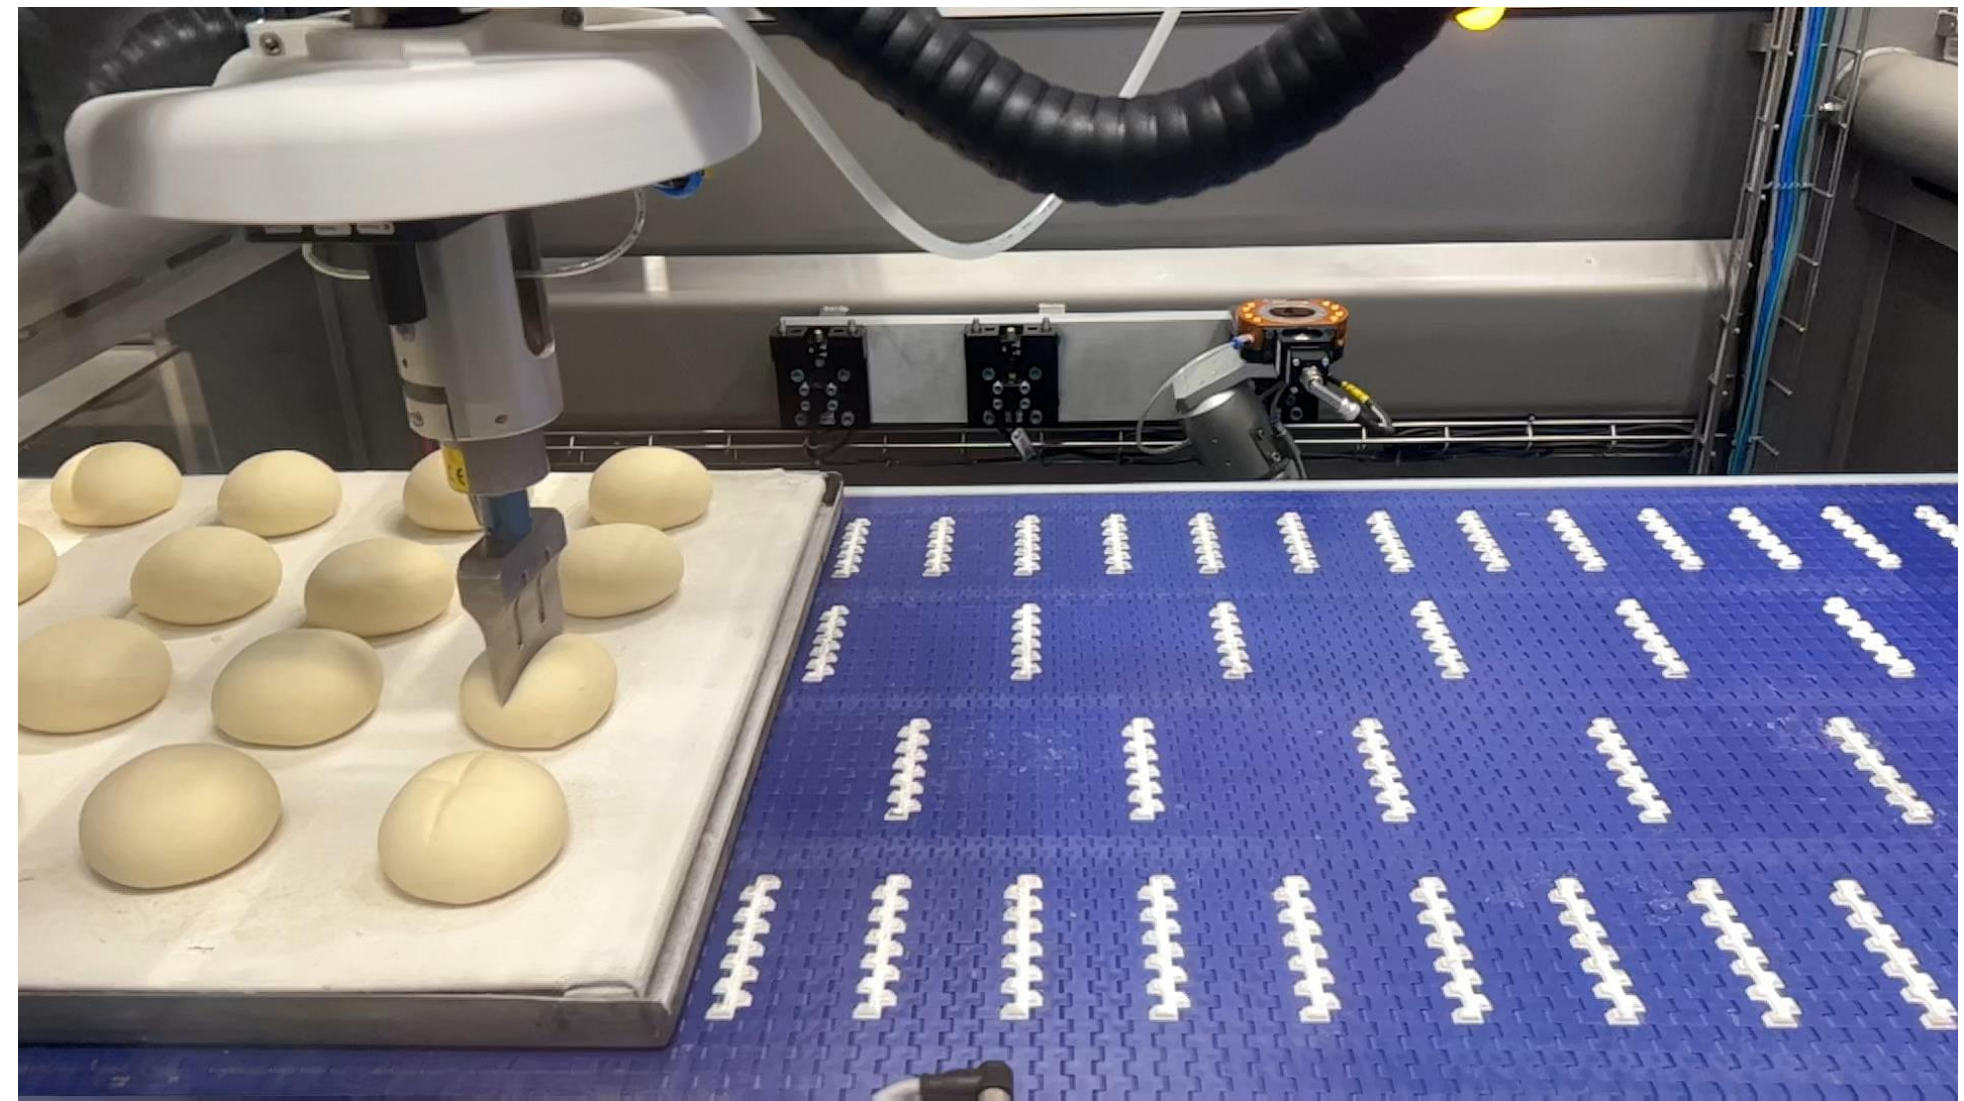

- ✓ **Scoring rate** : Up to **200 cuts/min**
- ✓ **Material** : Titanium, air-cooled

WATERJET

Recommended for

- ✓ Straight dough
- ✓ Complex cut
- ✓ Very high scoring rate



Commodity baguette

4 cuts



Viennese bread

8 cuts



Boule

3 cross-cut





Seeded loaf bread

1 straight cut



- ✓ **Scoring rate:** Up to 120 cuts/min per head, 600 cuts/min per tool
- ✓ **Accuracy:** Configurable angles, adjustable pressure

SMALL FOOTPRINT TO EASILY FIT YOUR BAKERY

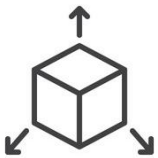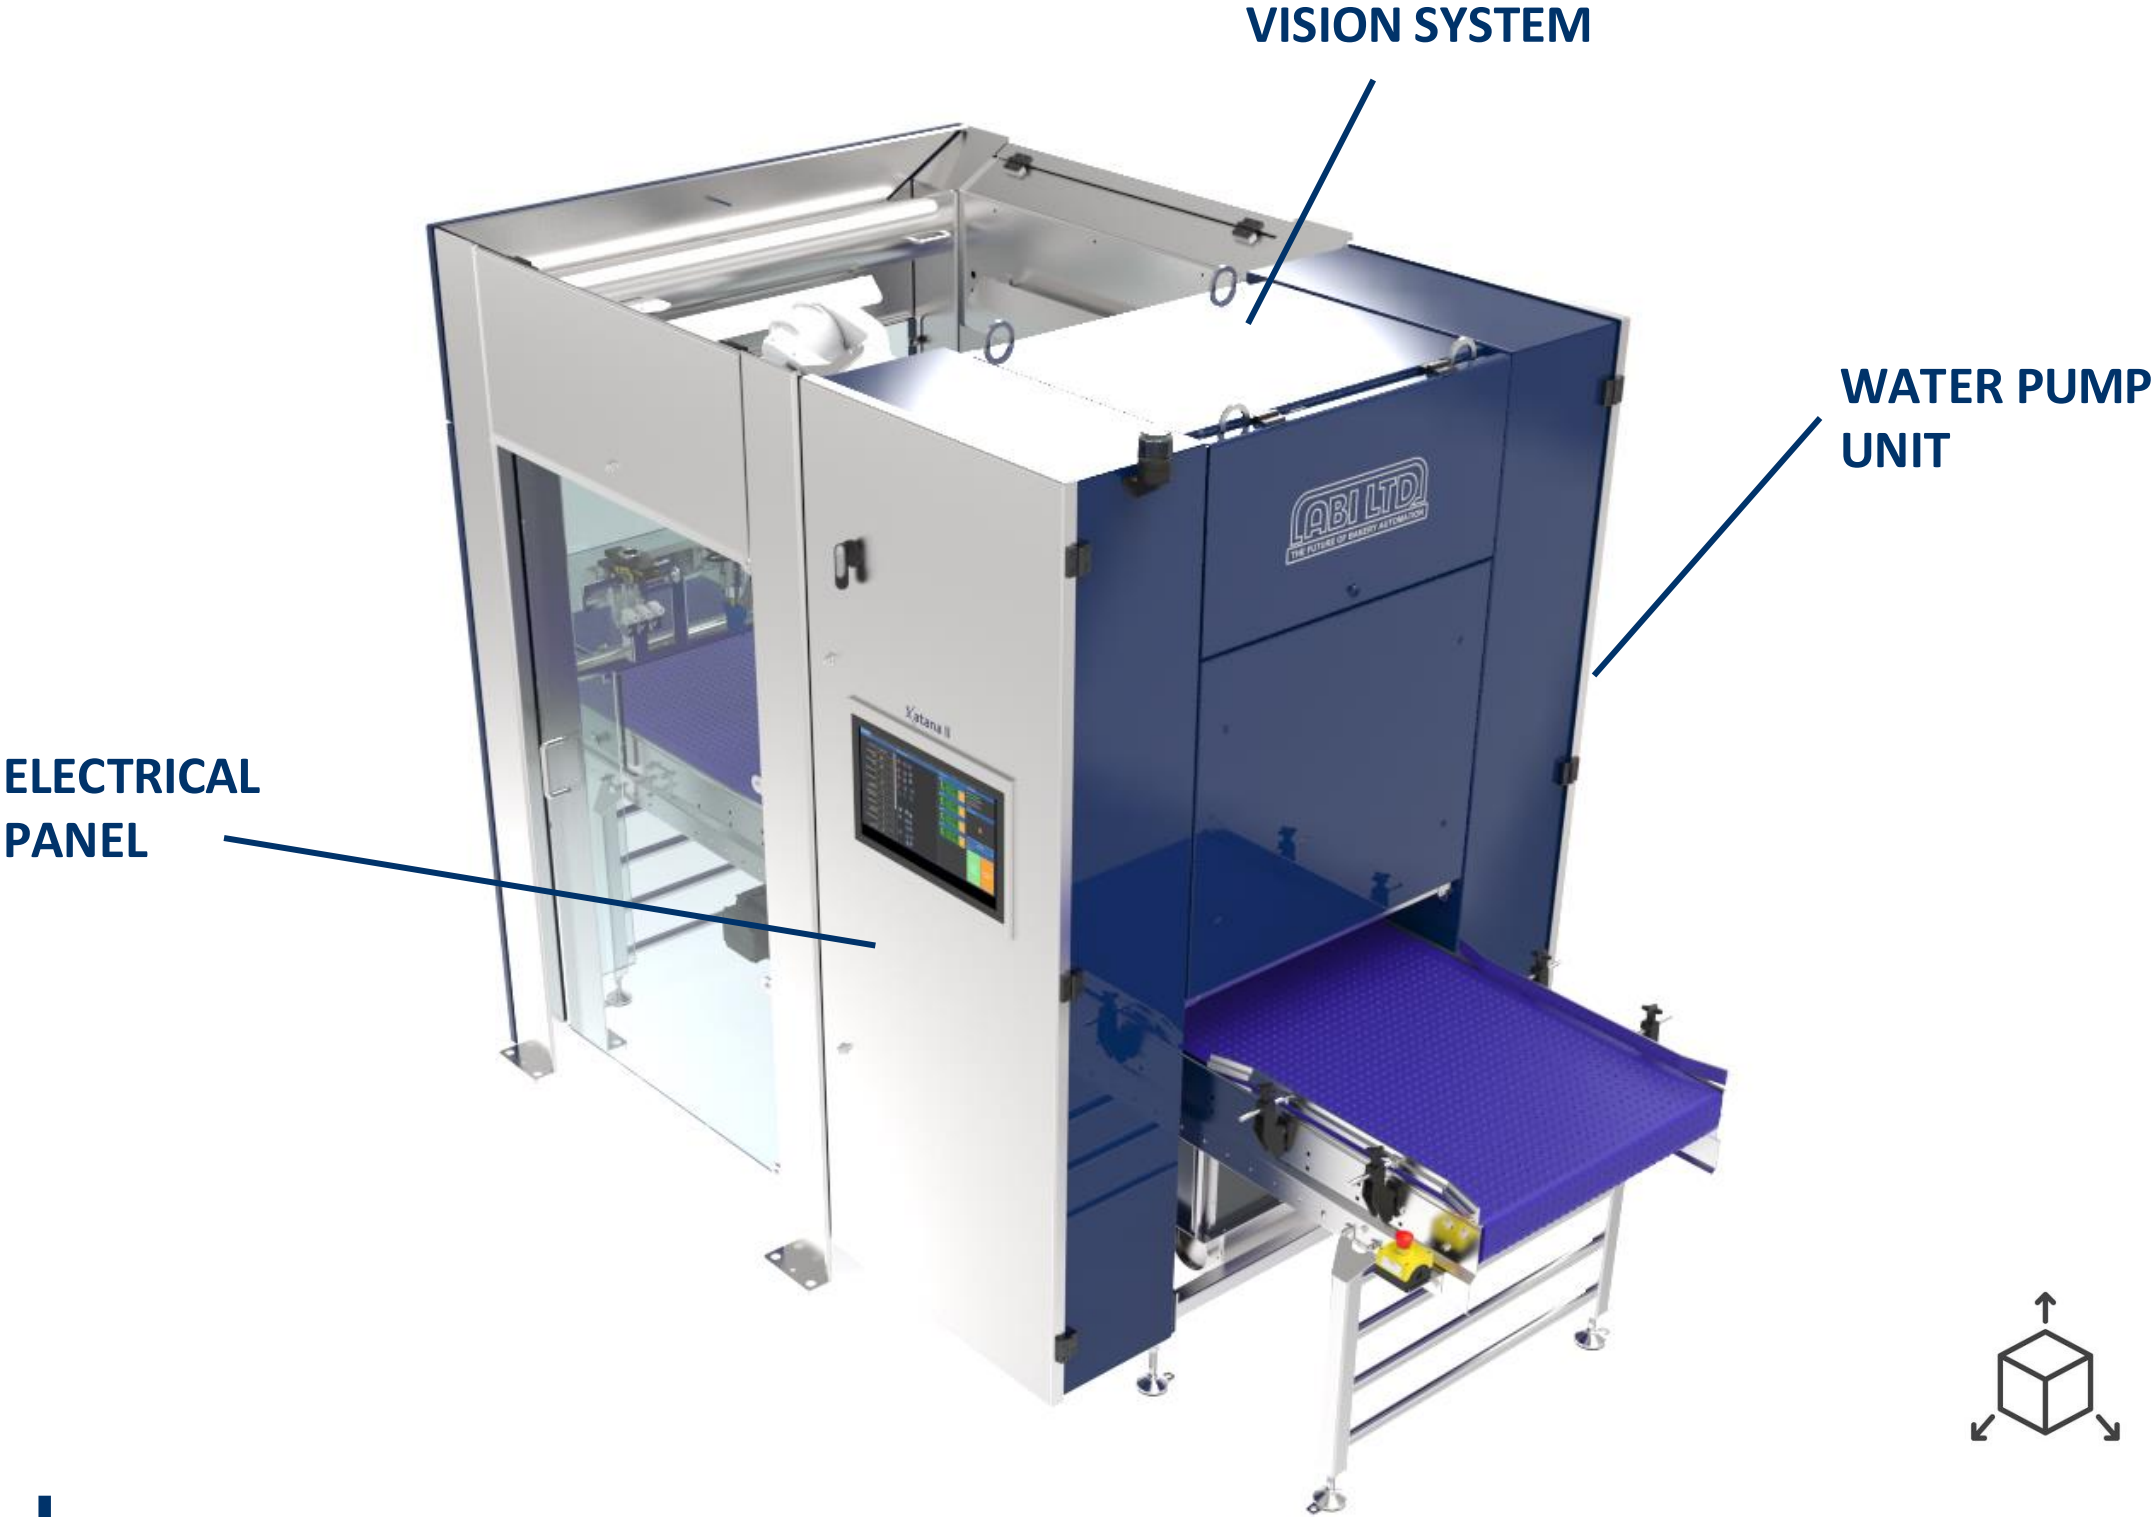


Metrics: 406 x 186 x 242cm
Imperial: 160 x 73 x 95"

ALL-IN-ONE CELL


Only for existing Katana customers

SMALL FOOTPRINT TO EASILY FIT YOUR BAKERY

Katana I

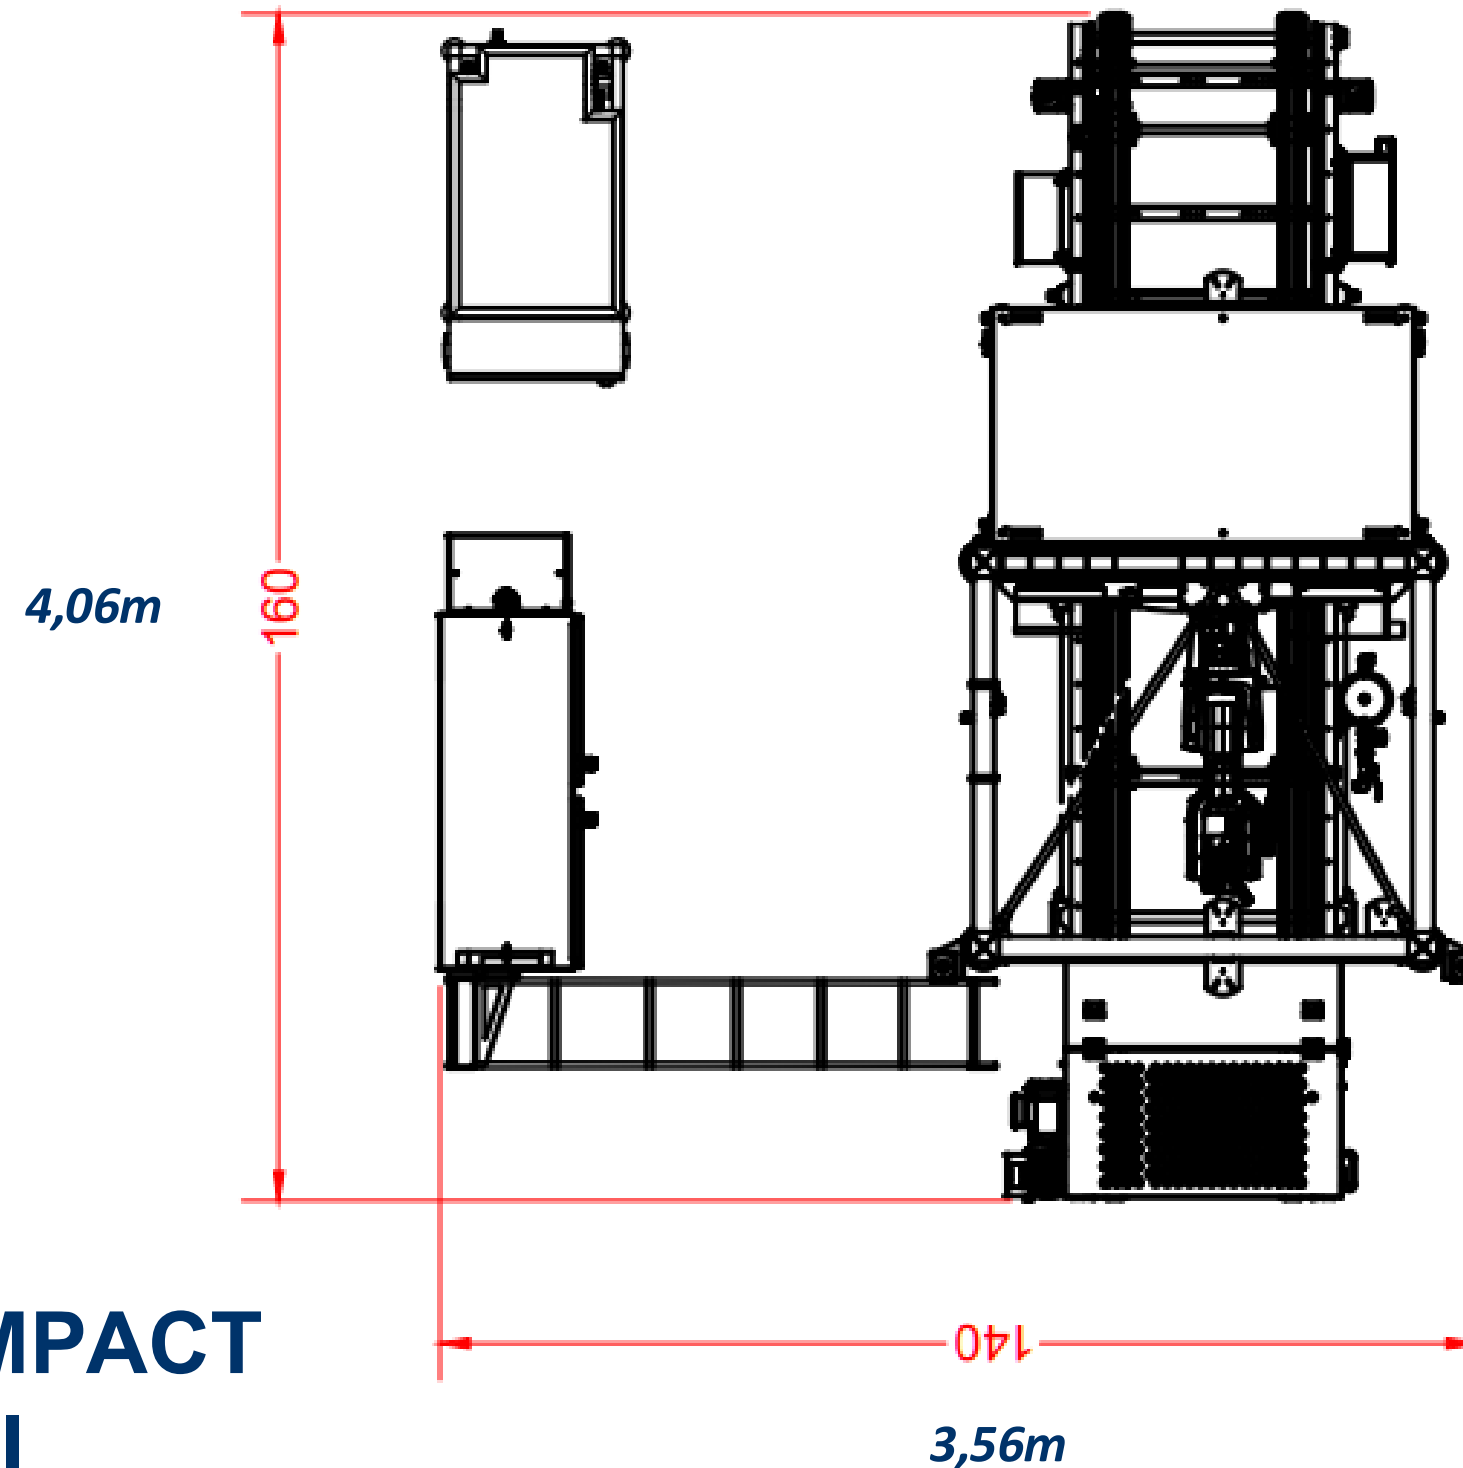


Katana II

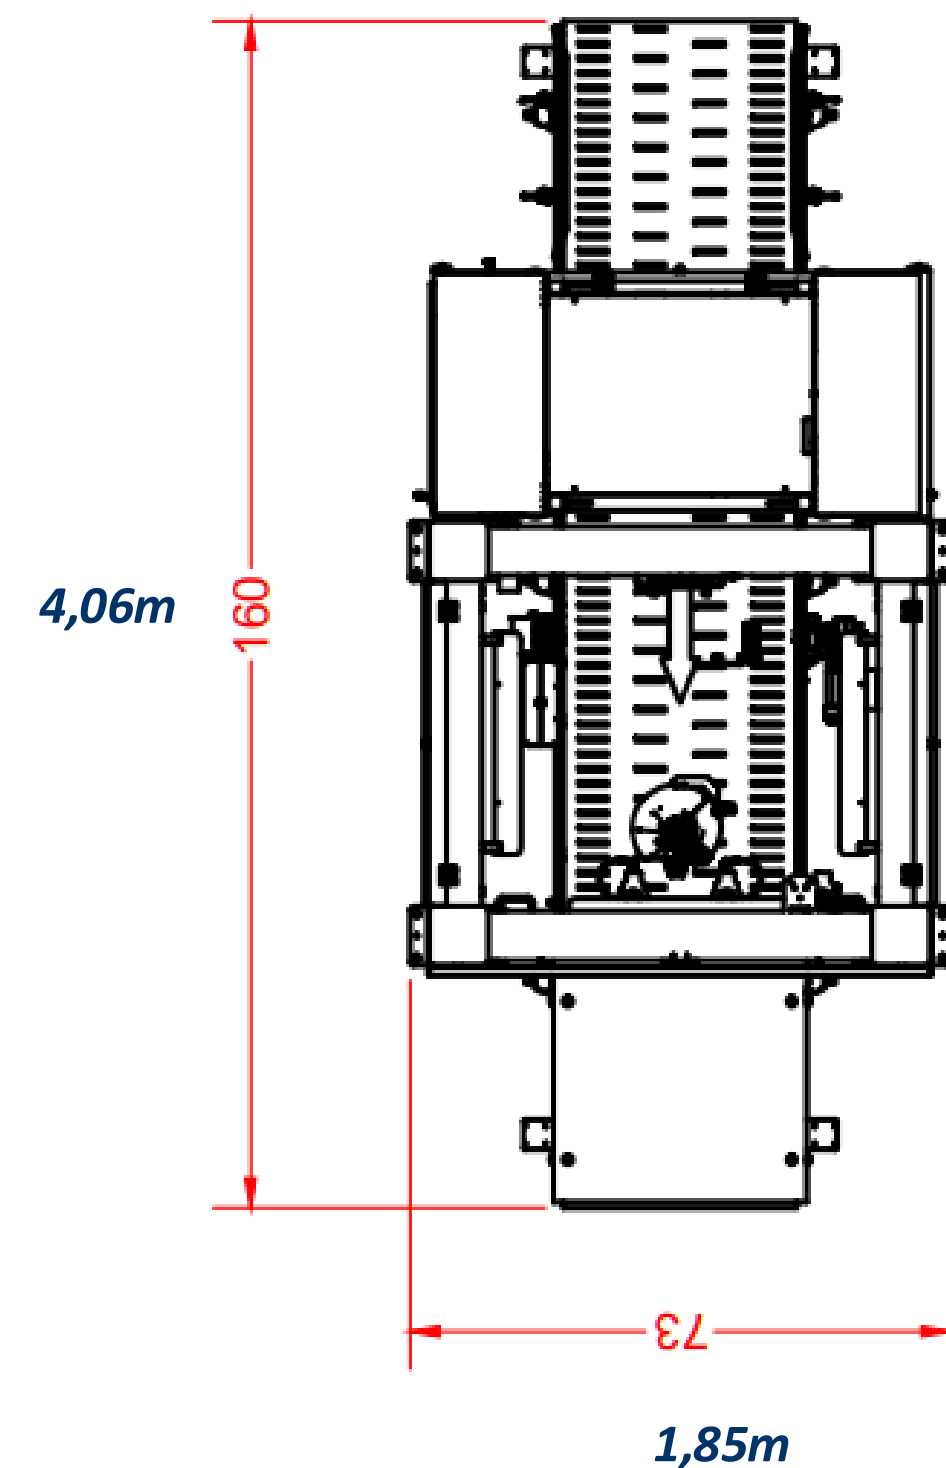

**48% MORE COMPACT
THAN KATANA I**

OPTIMIZED PRODUCTION EFFICIENCY: READY TO CONNECT TO MY MECATHERM PLATFORM

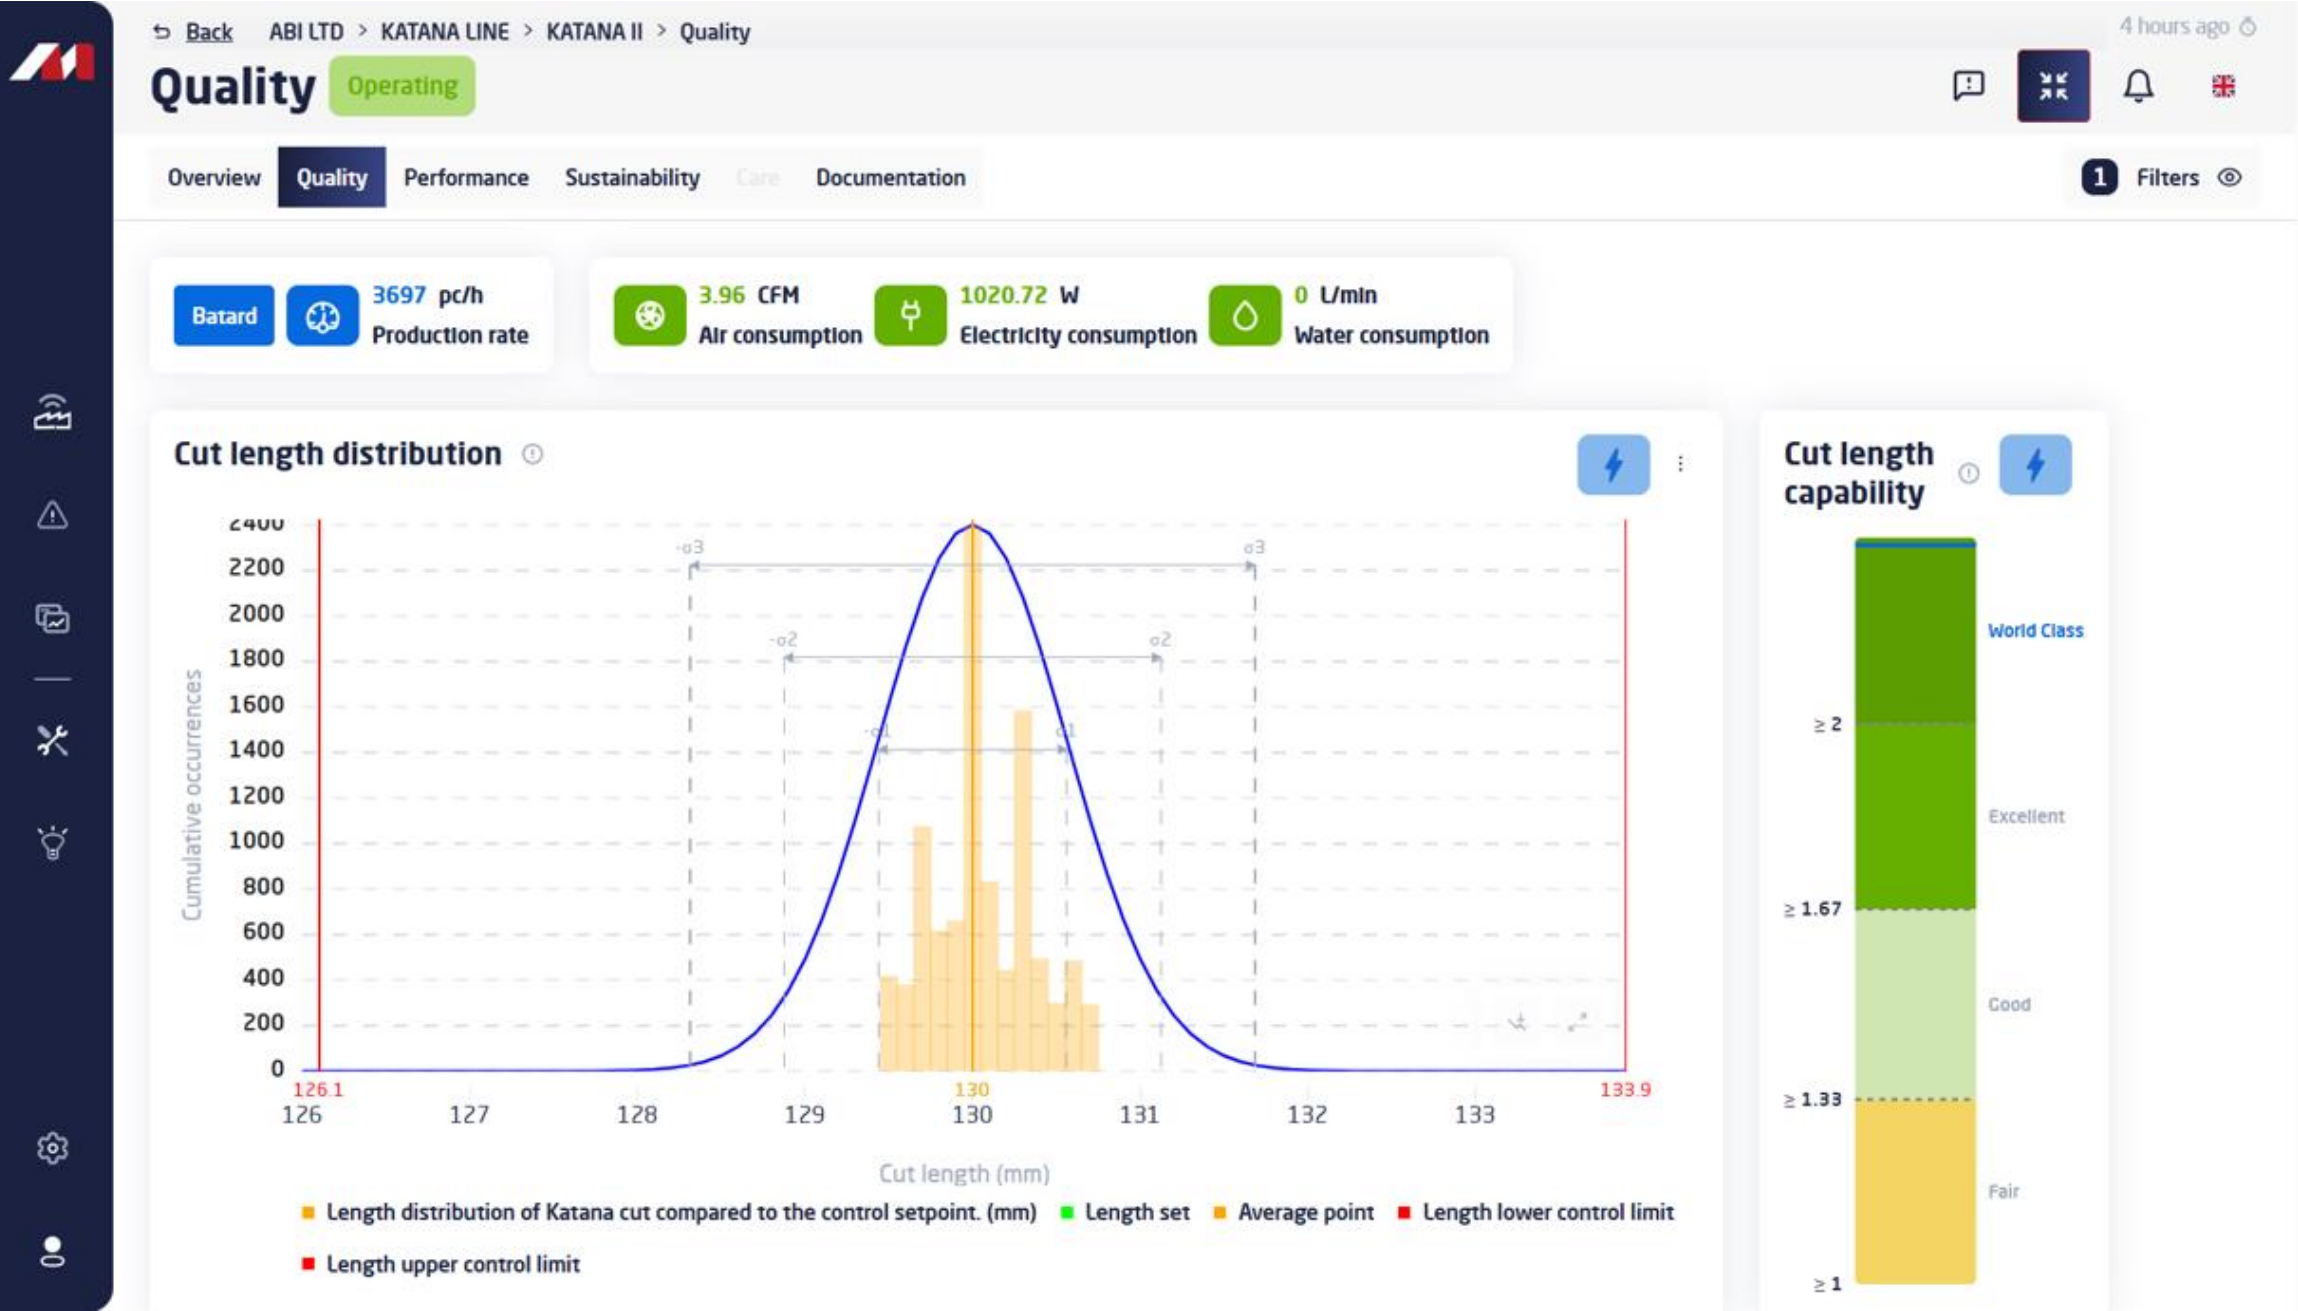

★ Real-time overview of Katana II performance, production rates, and quality metrics.

DATA DRIVEN INSIGHT ENABLES PROACTIVE DECISION-MAKING



OPERATOR-CENTRIC DESIGN

Easy to operate

Easy to maintain

Easy to clean

EASY TO OPERATE: AUTOMATIC CHANGEOVER IN LESS THAN 1 MINUTE

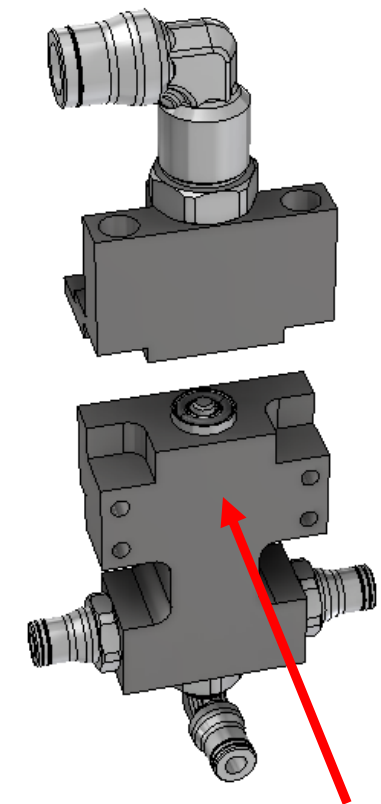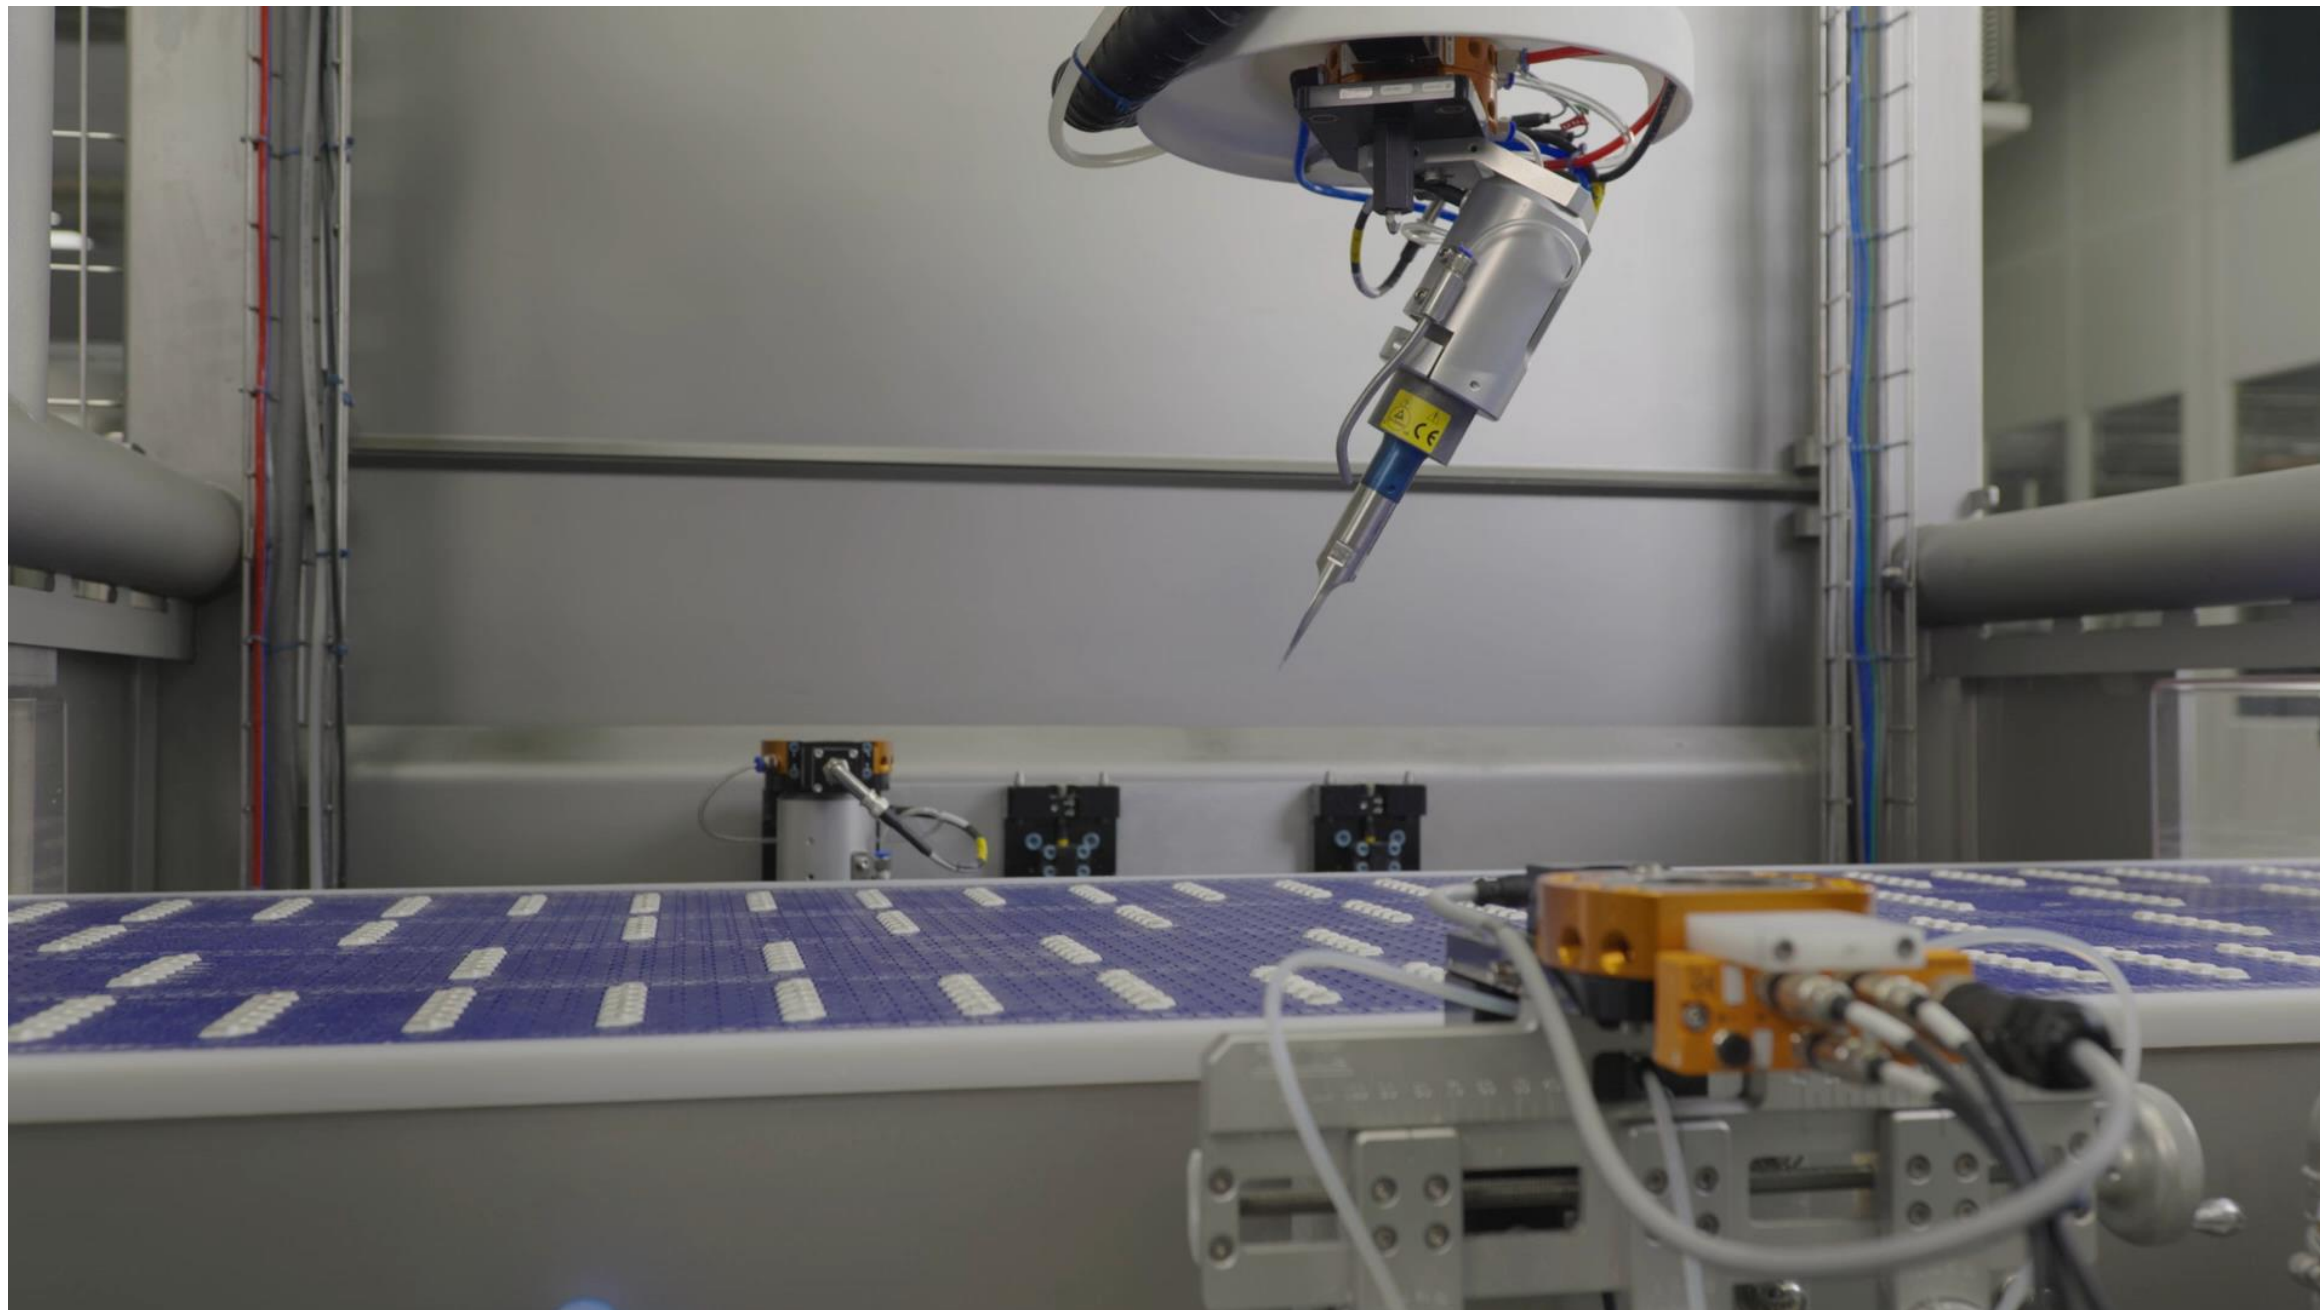


Quick disconnect valve
To switch from Ultrasonic to Waterjet



Dip tank cleaning procedure

**FULLY AUTOMATIC OPERATION COMPATIBLE
WITH ALL TOOLS**


EASY TO OPERATE: INTUITIVE PROGRAMMING

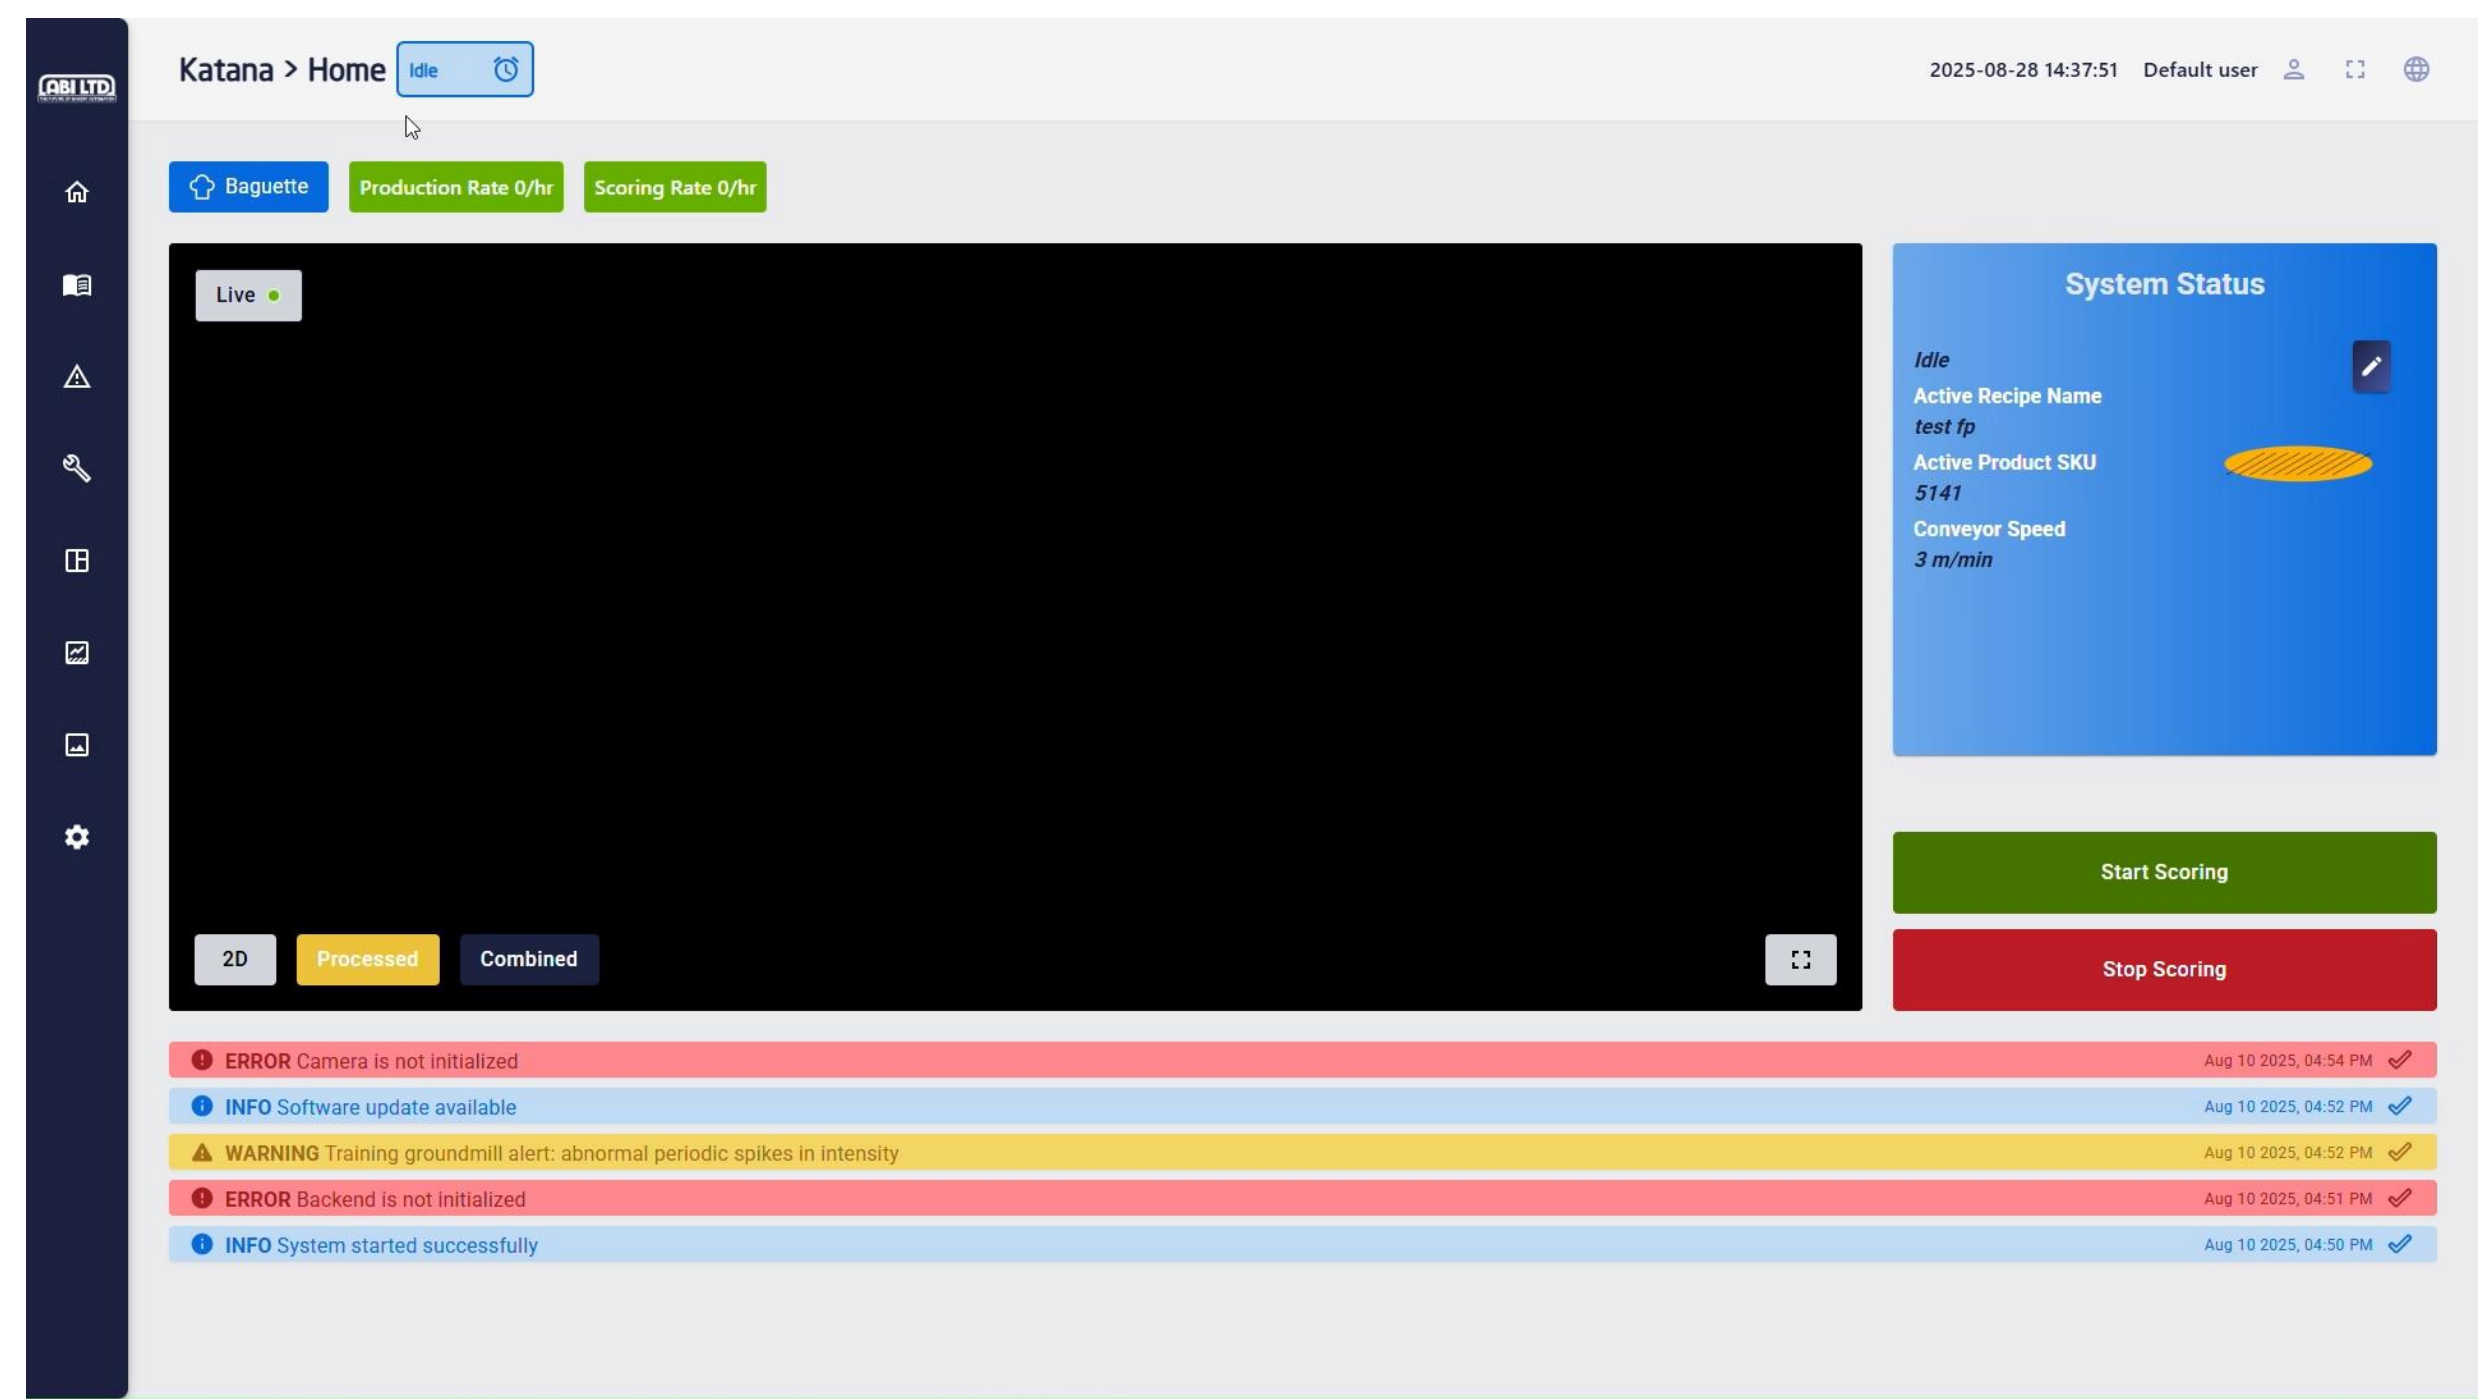

*Software built in-house
with industry partners*


LESS THAN 2 MINUTES TO CREATE A RECIPE

EASY TO MAINTAIN

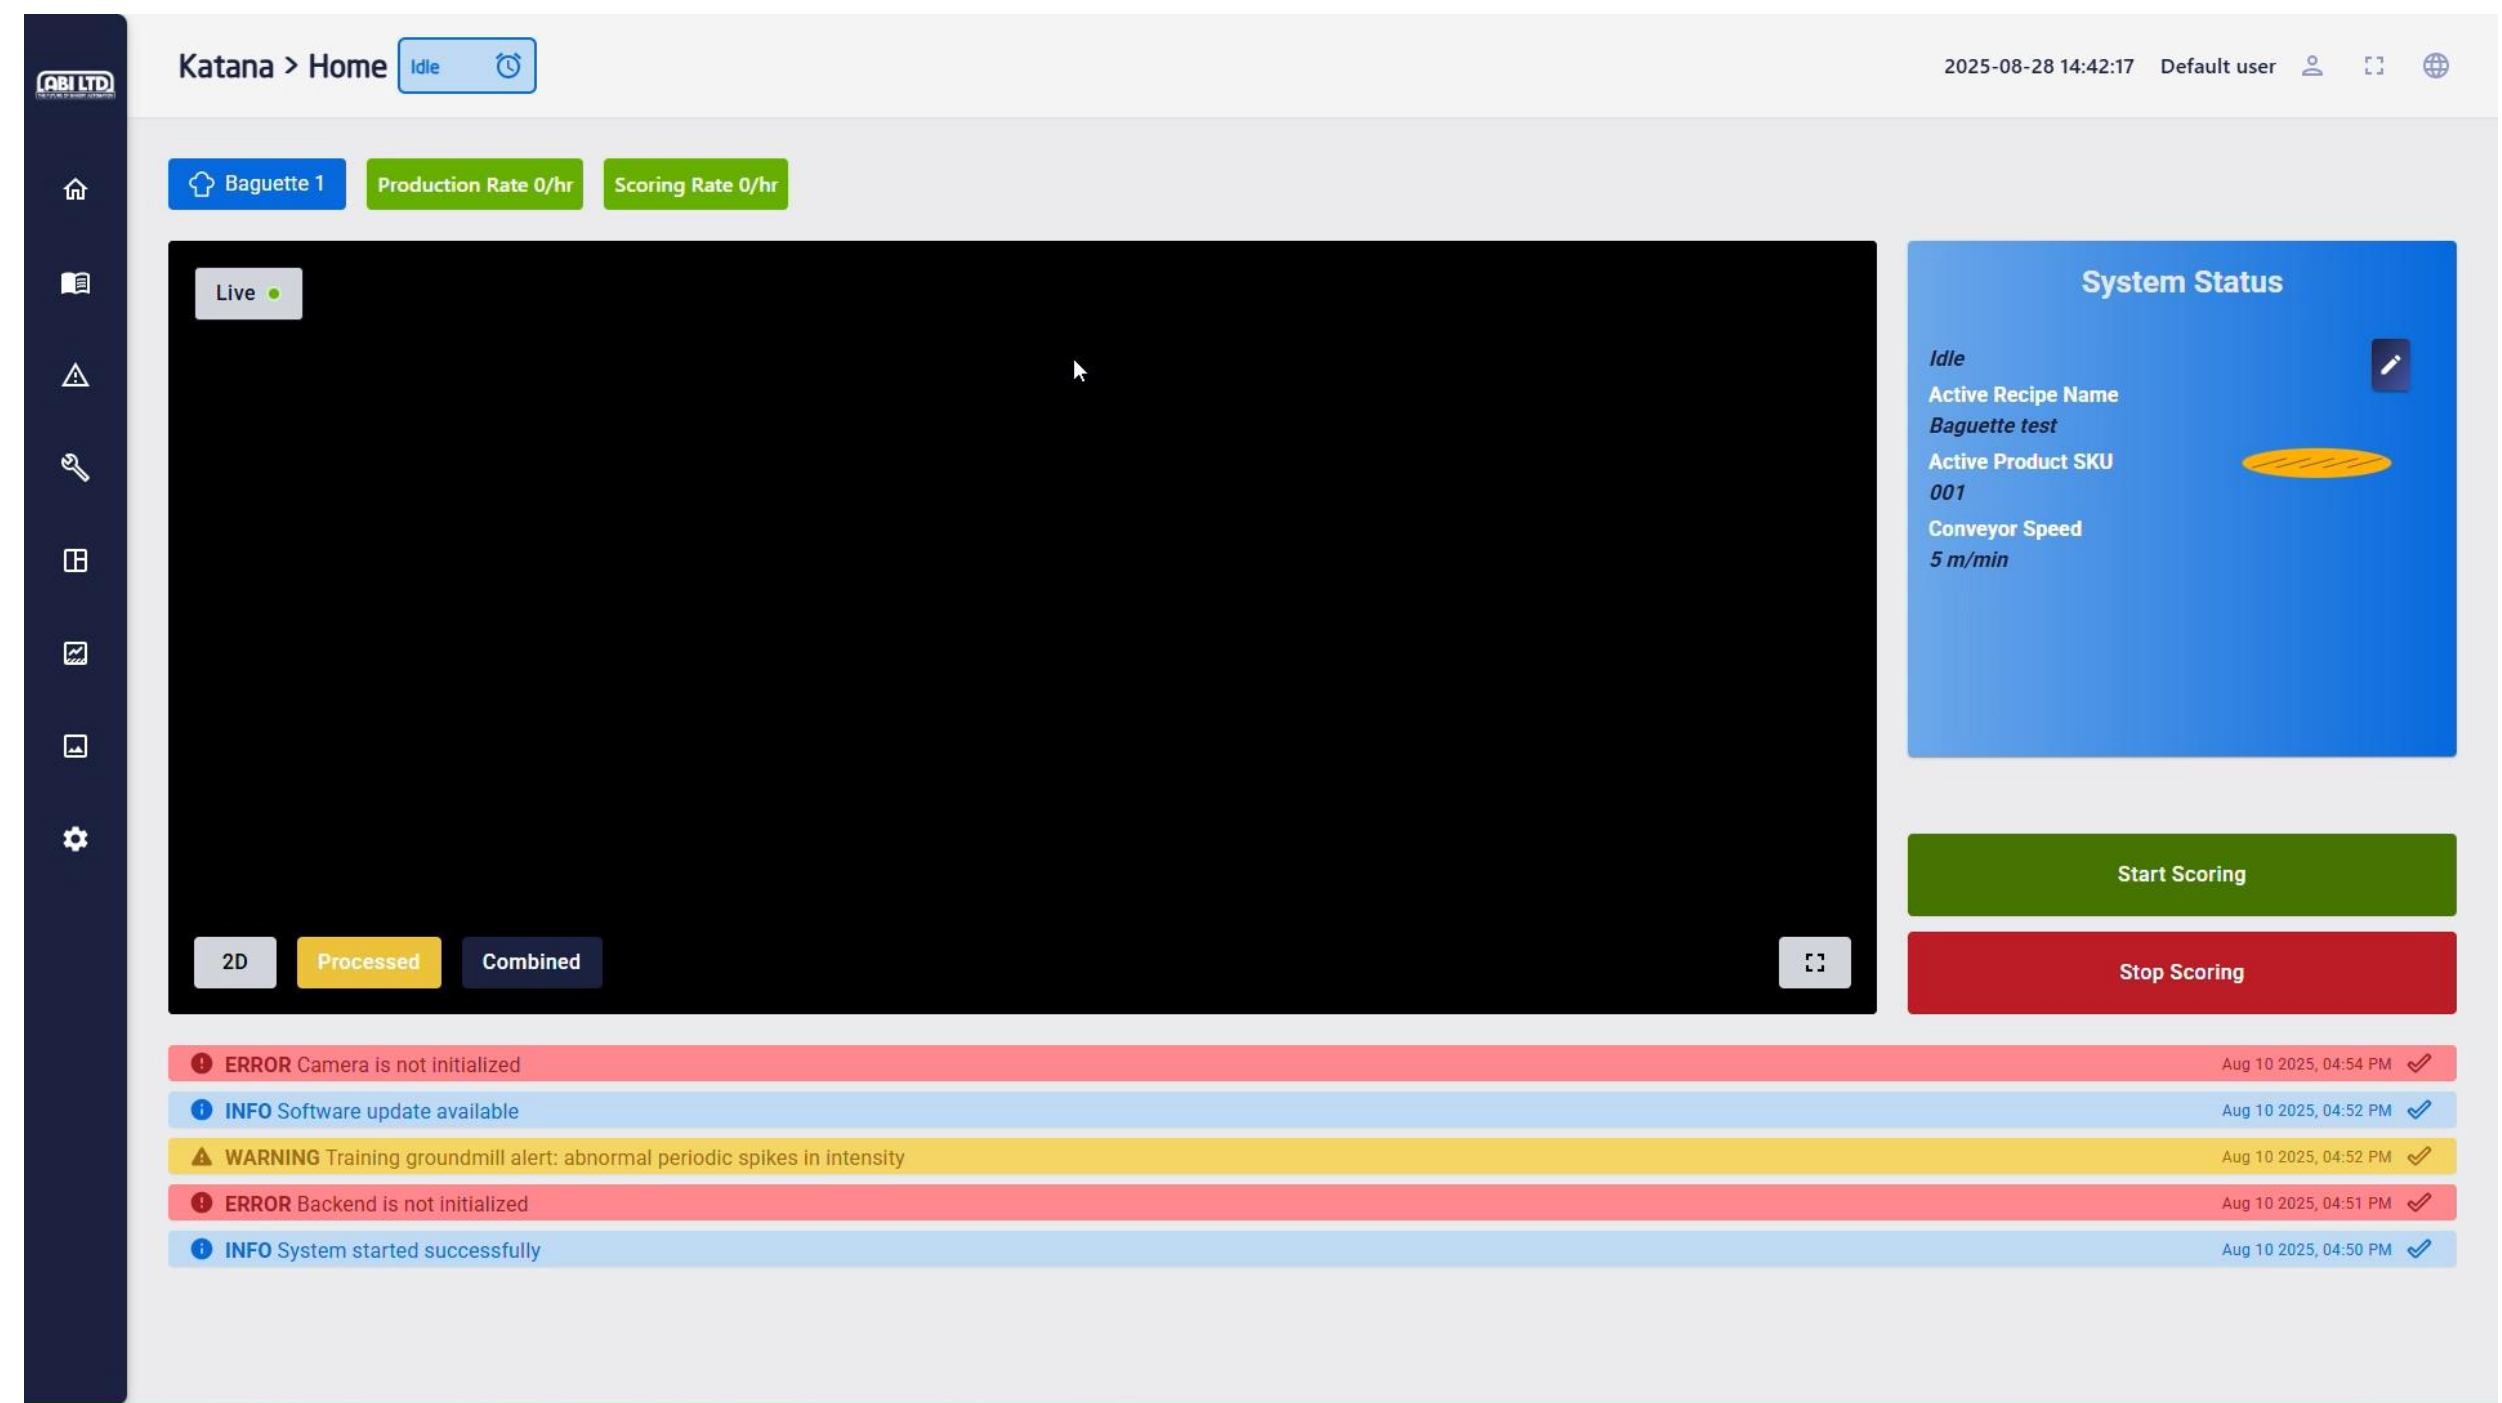

INCLUDES DOCUMENTATION & MAINTENANCE PROCEDURE

EASY TO CLEAN: BUILT WITH CLEANING EFFICIENCY IN MIND

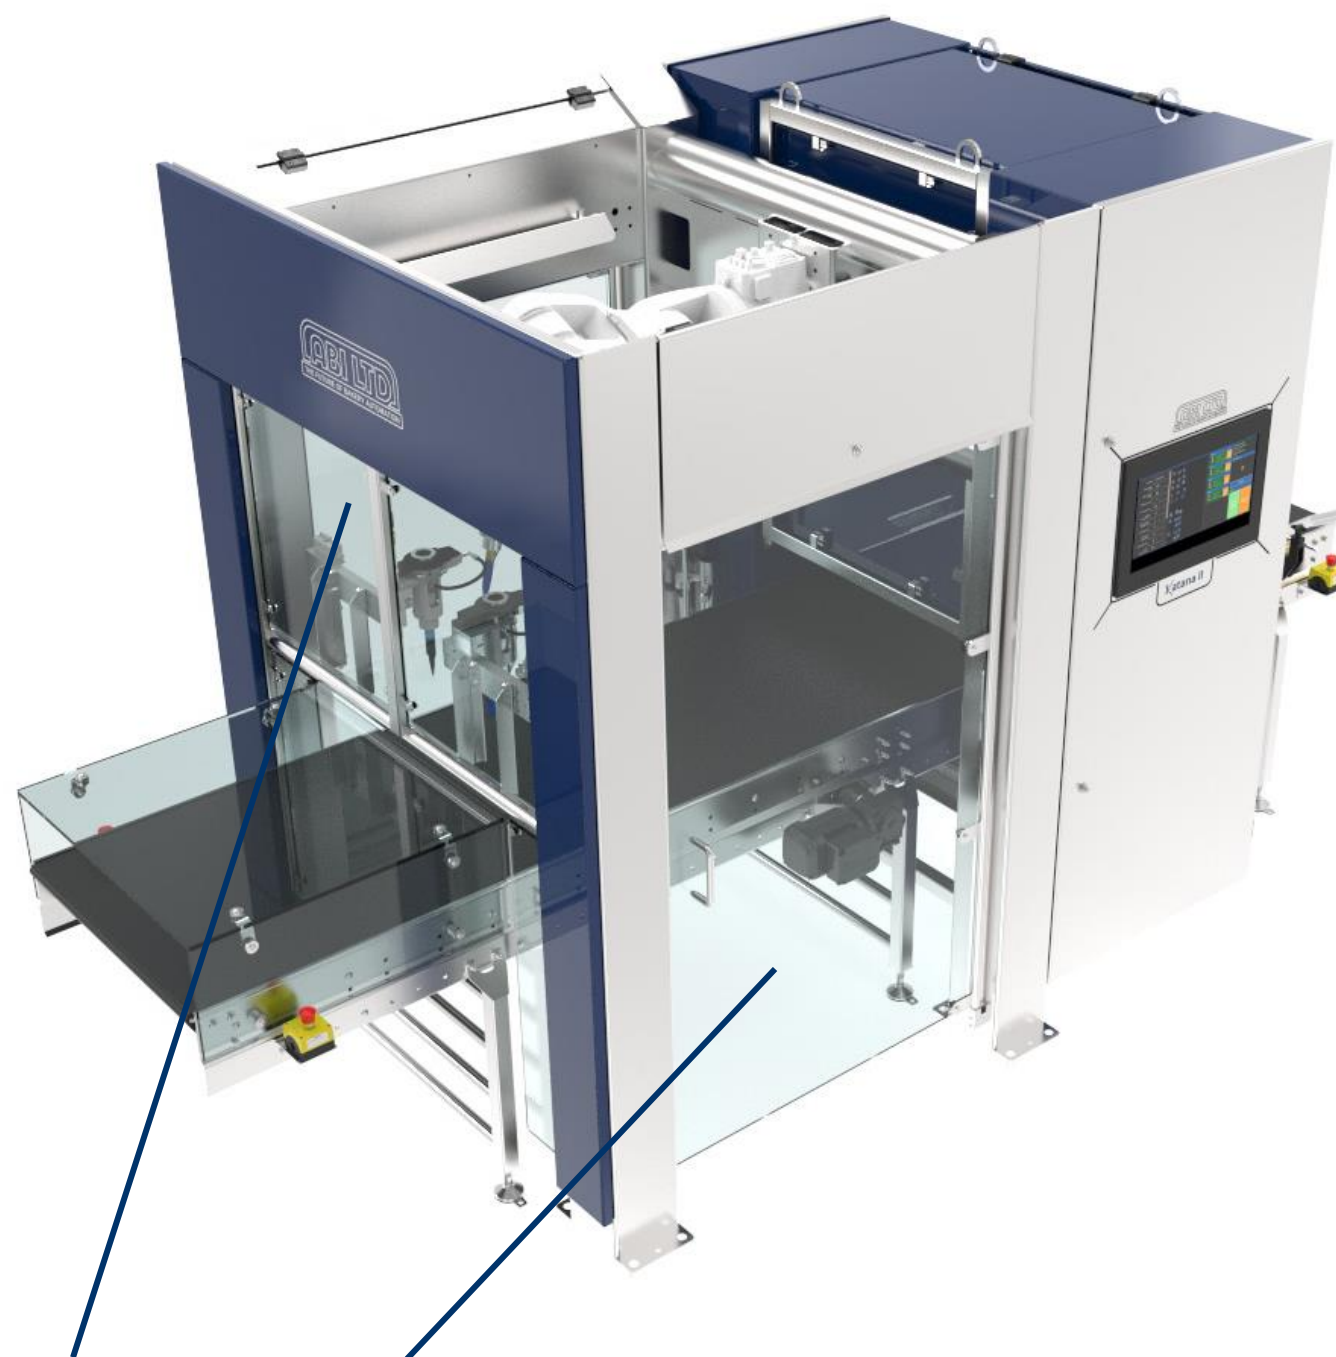

-  *Automatic blow-off function for 3d line scanner to avoid frequent human intervention to remove dust*
-  *Nozzles turned off between cuts to avoid water splashes*
-  *Scratch resistant Lexan for better quality and durability*

**HIGH VISIBILITY AND SPACE
FULL ACCESSIBILITY**

THANK YOU

